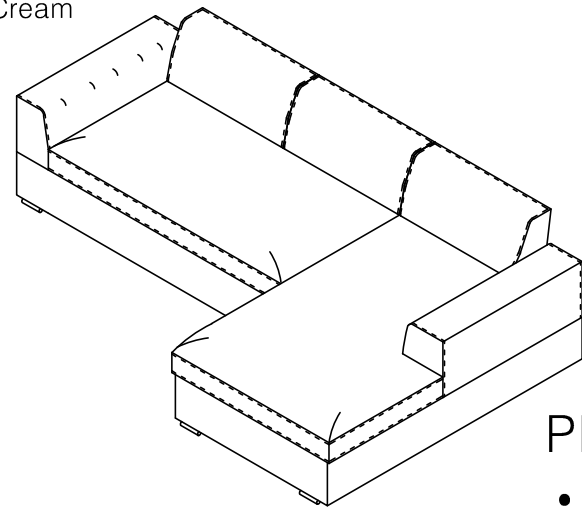


dwell

Verona right hand corner sofa


AI-SN-S260

102287-Mocha
104192-Charcoal
102289-Cream

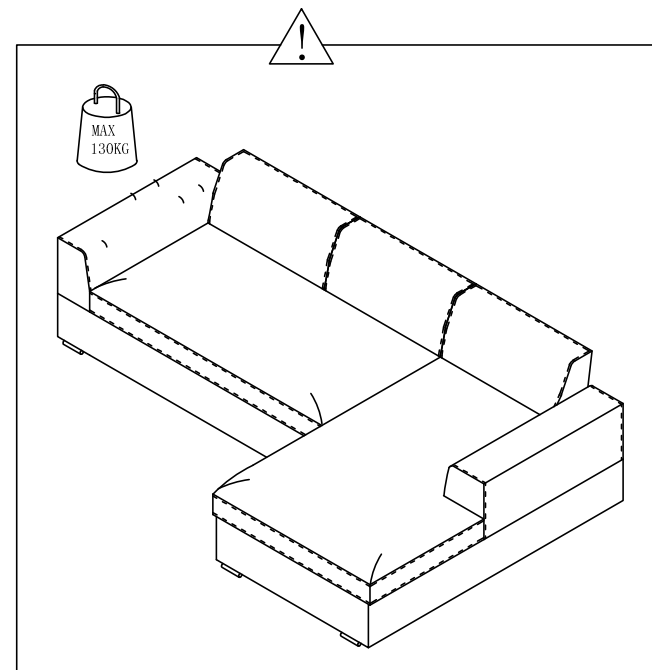
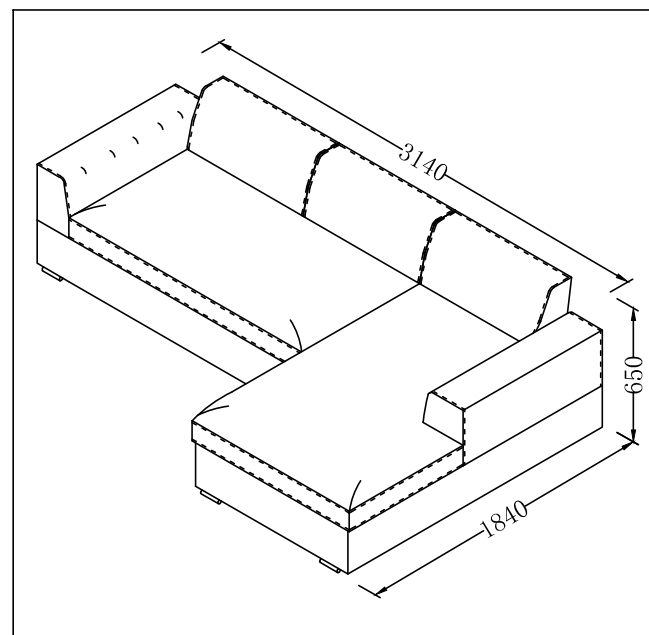


PLEASE READ

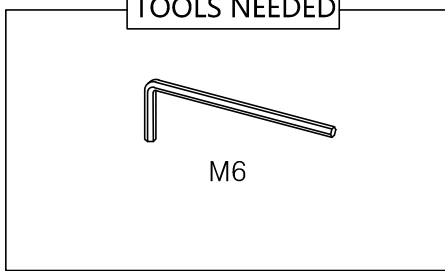
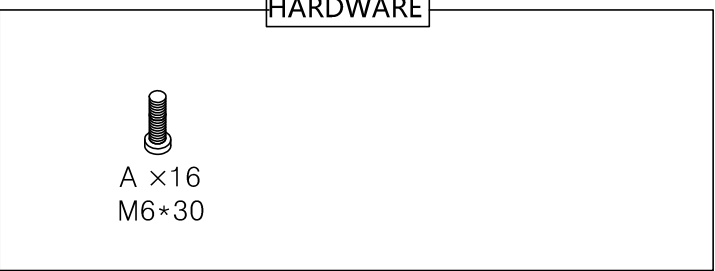
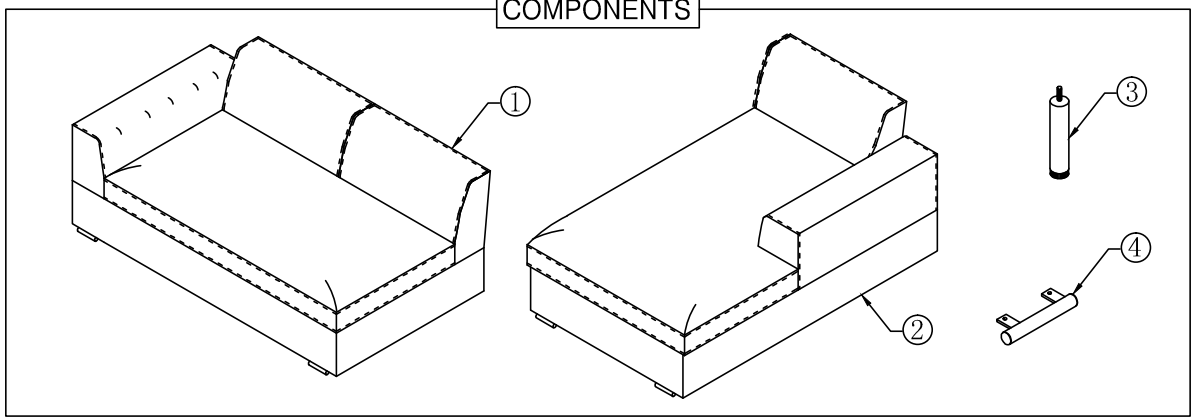
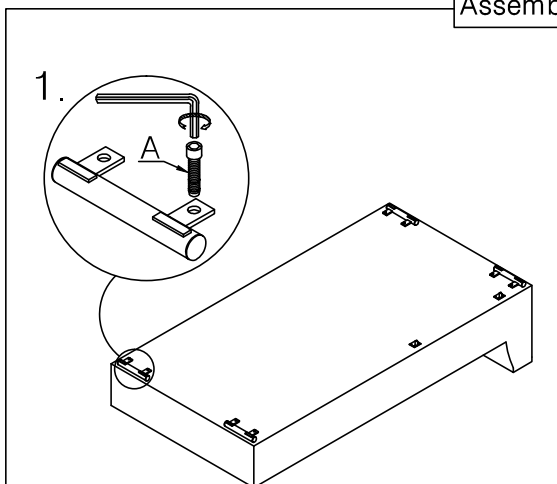
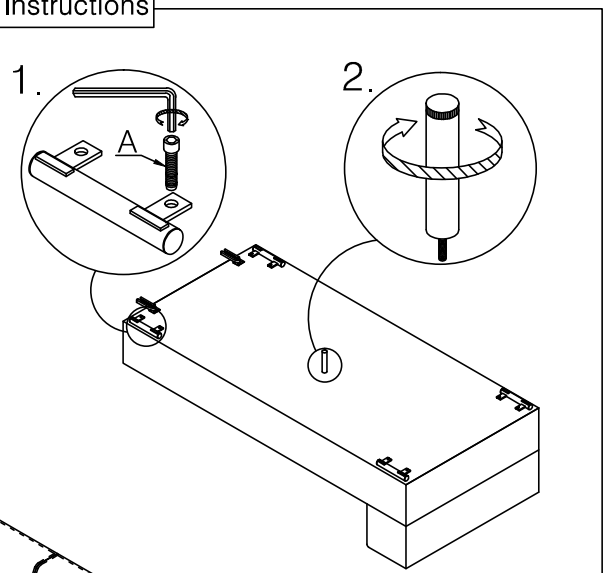
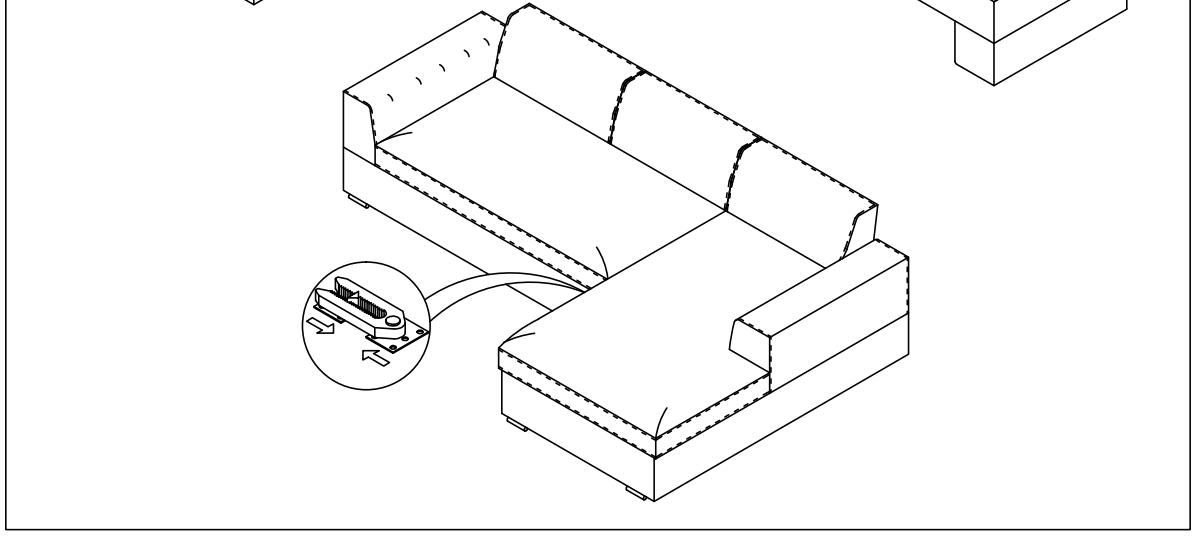
- Please read the assembly instructions carefully.
- We cannot accept return on any part or fully assembled products.
- Identify each part of the furniture before assembly using the instructions.
- Check all pieces are present and correct.
- Ensure you have all of the correct tools needed for assembly.
- Clear a suitable place to work.
- Never force the fittings together.
- Do not fully tighten any screws until all pieces of the main structure are in place.
- Keep these instructions for future assembly.



2 persons
assembly



AI-SN-S260

| TOOLS NEEDED | HARDWARE |
|---|---|
|  <p>M6</p> |  <p>A x 16 M6 x 30</p> |
| COMPONENTS | |
|  | |
| Assembly Instructions | |
|   | |
|  | |