


# dwell




## Nova sideboard

107295-white


107294-black

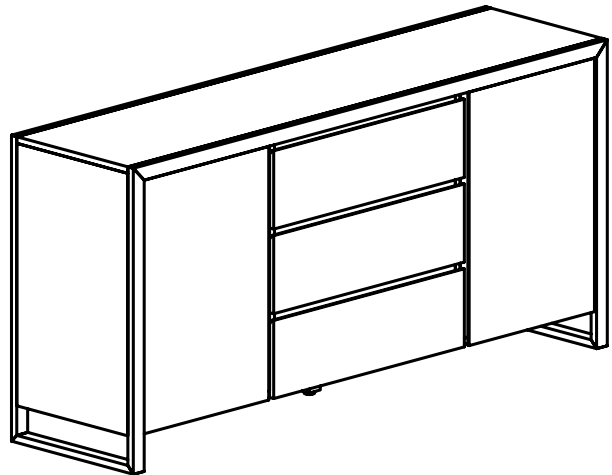


- Please read the assembly instructions carefully.
- Identify each part of the furniture before assembly using the instructions.
- Check all pieces are present and correct.
- Ensure you have all of the correct tools needed for assembly.
- Clear a suitable place to work.
- Never force the fittings together.
- Do not fully tighten any screws until all pieces of the main structure are in place.
- Keep these instructions for future assembly.

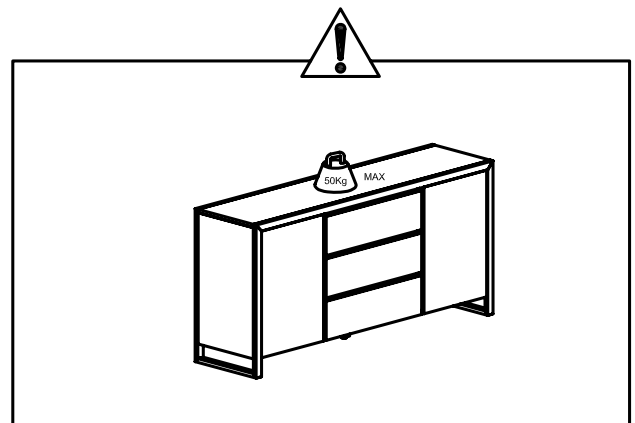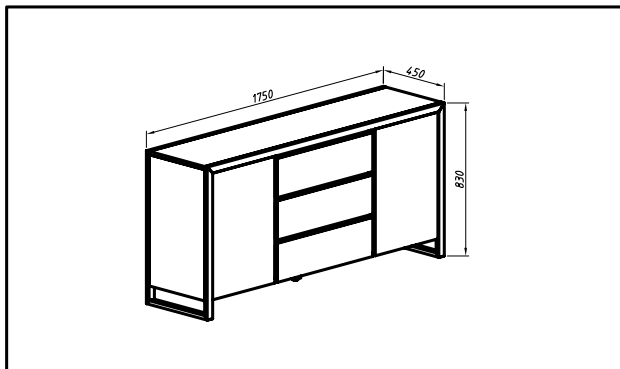

# COMPONENTS

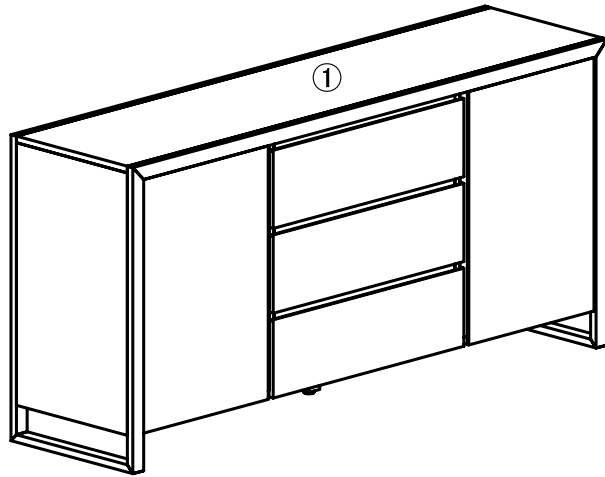

## TOOLS NOT INCLUDED




## HARDWARE




Ax1 pc  
(M4\*16)



Bx2 pcs  
(Ø12\*Ø4\*1.5)



Cx1 pc  
(20\*1.5\*200)





Dx1 pc  
(Ø6\*25)



Ex1 pc  
(M4\*25)

1 ▷

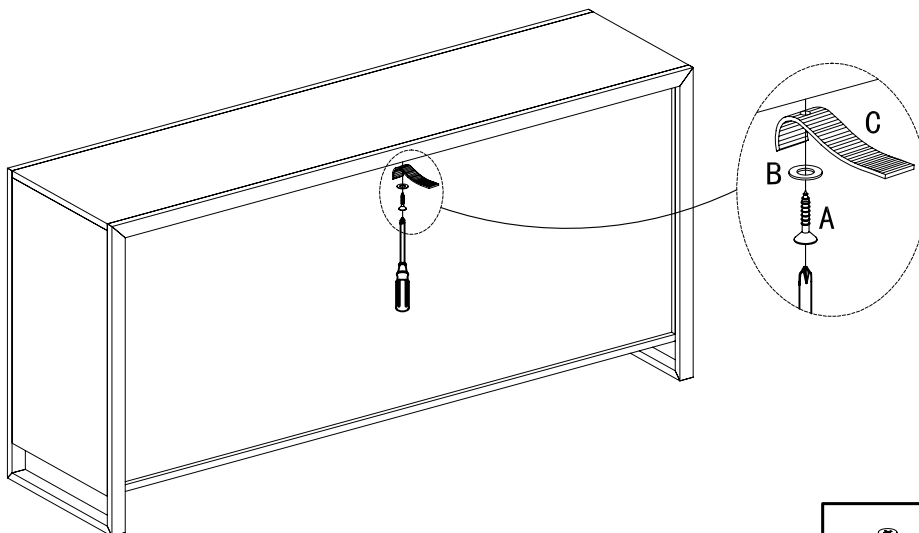

Ax1 pcs  
(M4\*16)





Bx1 pcs  
(Ø12\*Ø4\*1.5)



Cx1 pcs  
(20\*1.5\*200)

# 2 ▷

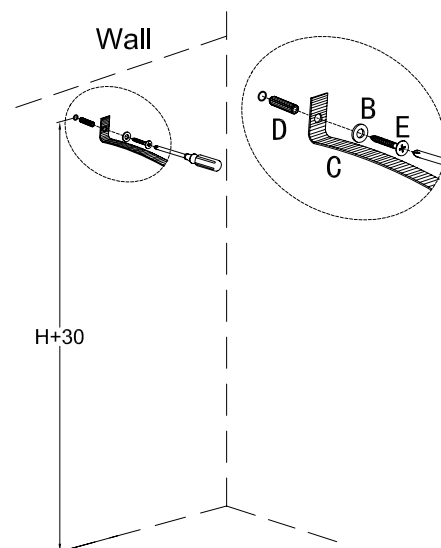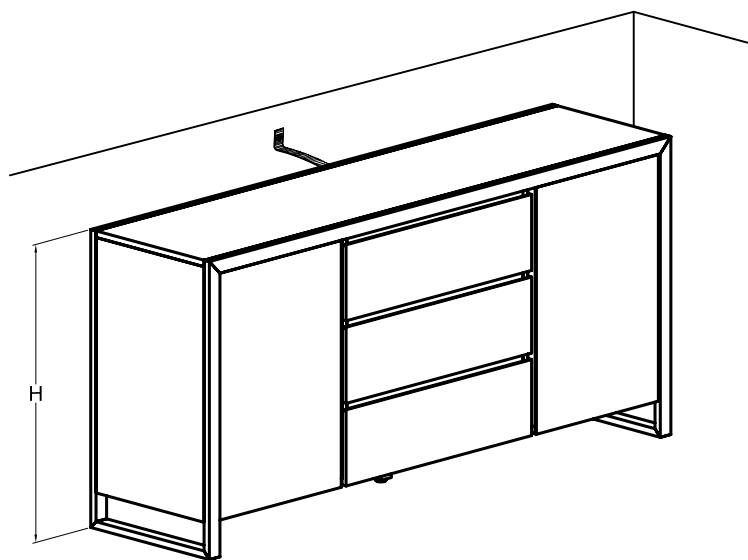

Bx1 pcs  
(Ø12\*Ø4\*1.5)

Dx1 pcs  
(Ø6\*25)

Ex1 pcs  
(M4\*25)