


dwell




Contour shelving unit

- 107202-Mocha
- 107203-Black
- 107204-White
- 109405-Grey
- 110252-Stone
- 110306-Midnight Blue
- 111233-Walnut

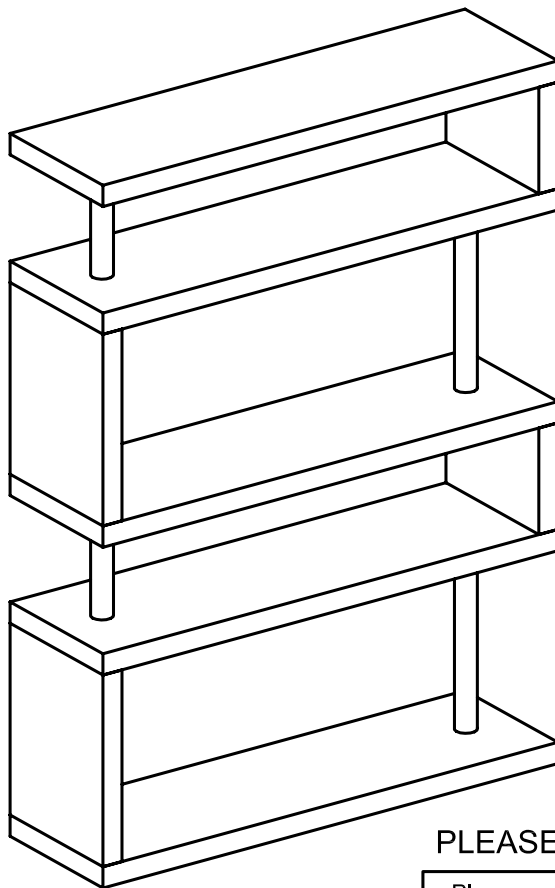


PLEASE READ

- Please read the assembly instructions carefully.
- We can not accept return on any part or fully assembled products.
- Identify each part of the furniture before assembly using the instructions.
- Check all pieces are present and correct.
- Ensure you have all of the correct tools needed for assembly.
- Clear a suitable place to work.
- Never force the fittings together.
- Do not fully tighten any screws until all pieces of the main structure are in place.
- Keep these instructions for future assembly.

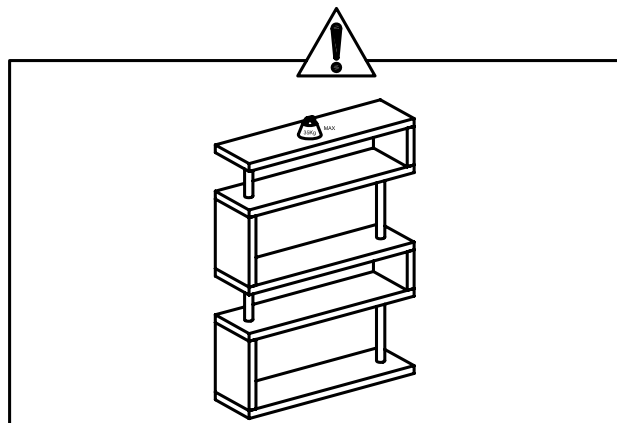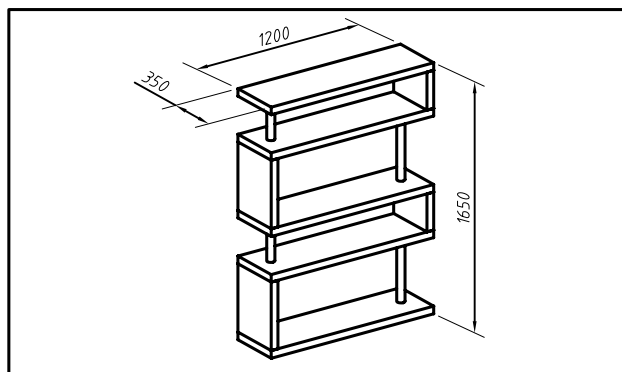

COMPONENTS

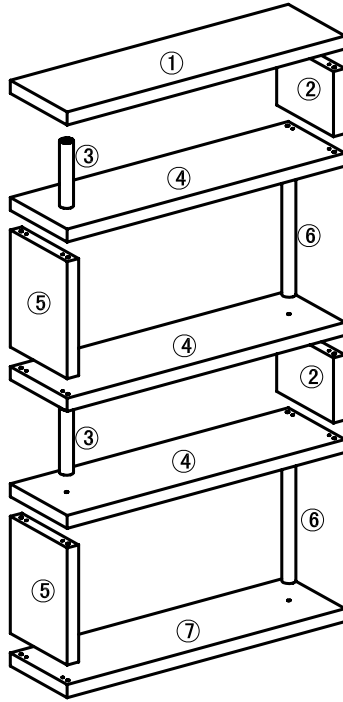

TOOLS INCLUDED



1x6MM

HARDWARE



Ax16pcs
(Ø6*30)



Bx12pcs
(Ø8)





Cx6pcs
(M8*310)



Dx6pcs
(M8*510)

1 ▶

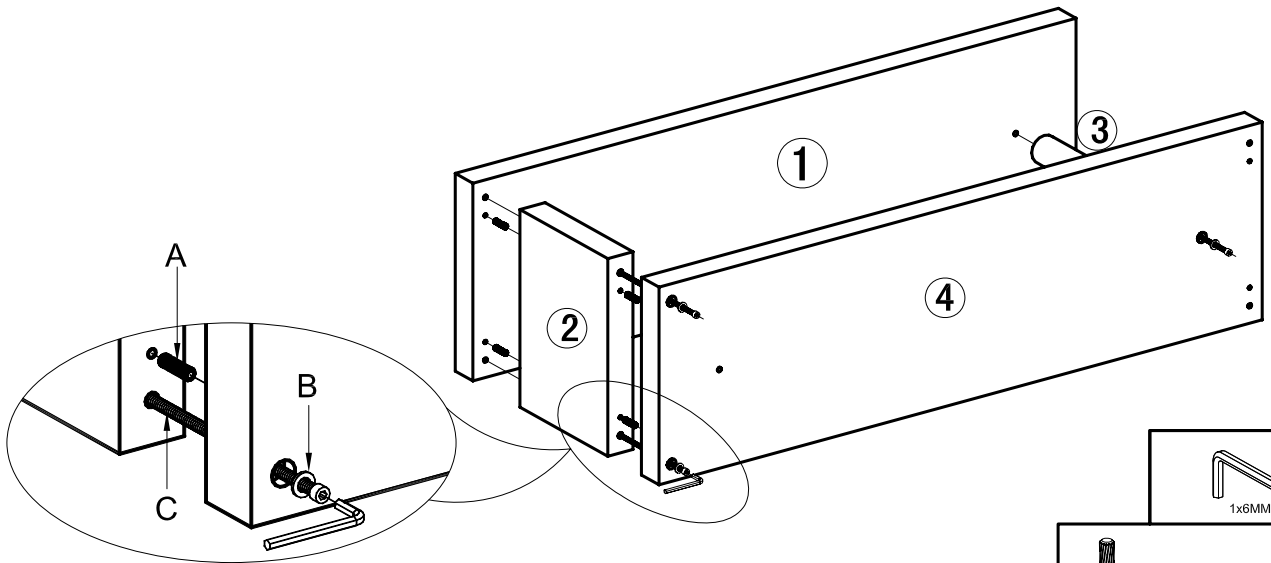

1x6MM



Ax4pcs
(Ø6*30)





Bx3pcs
(Ø8)





Cx3pcs
(M8*310)


2 ▶

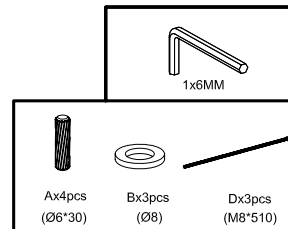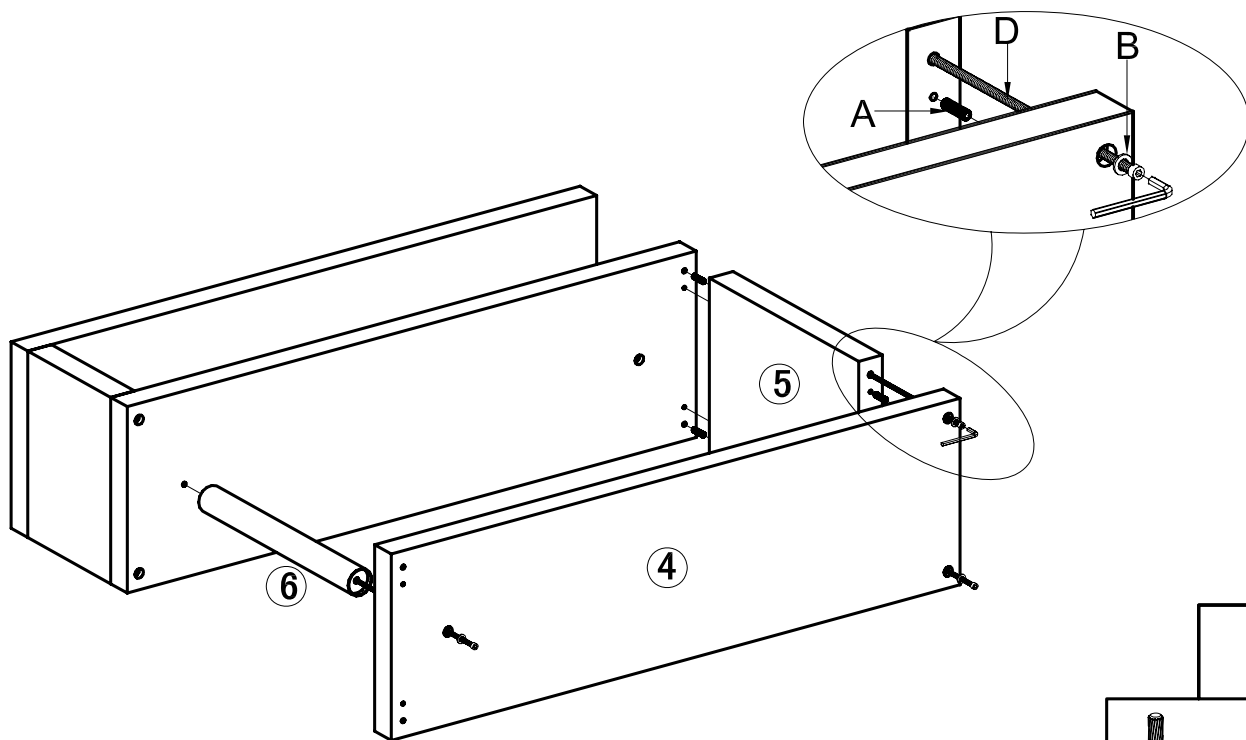

3 ▶

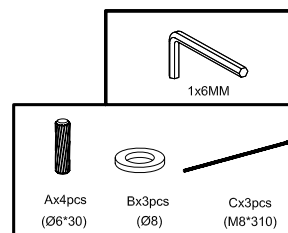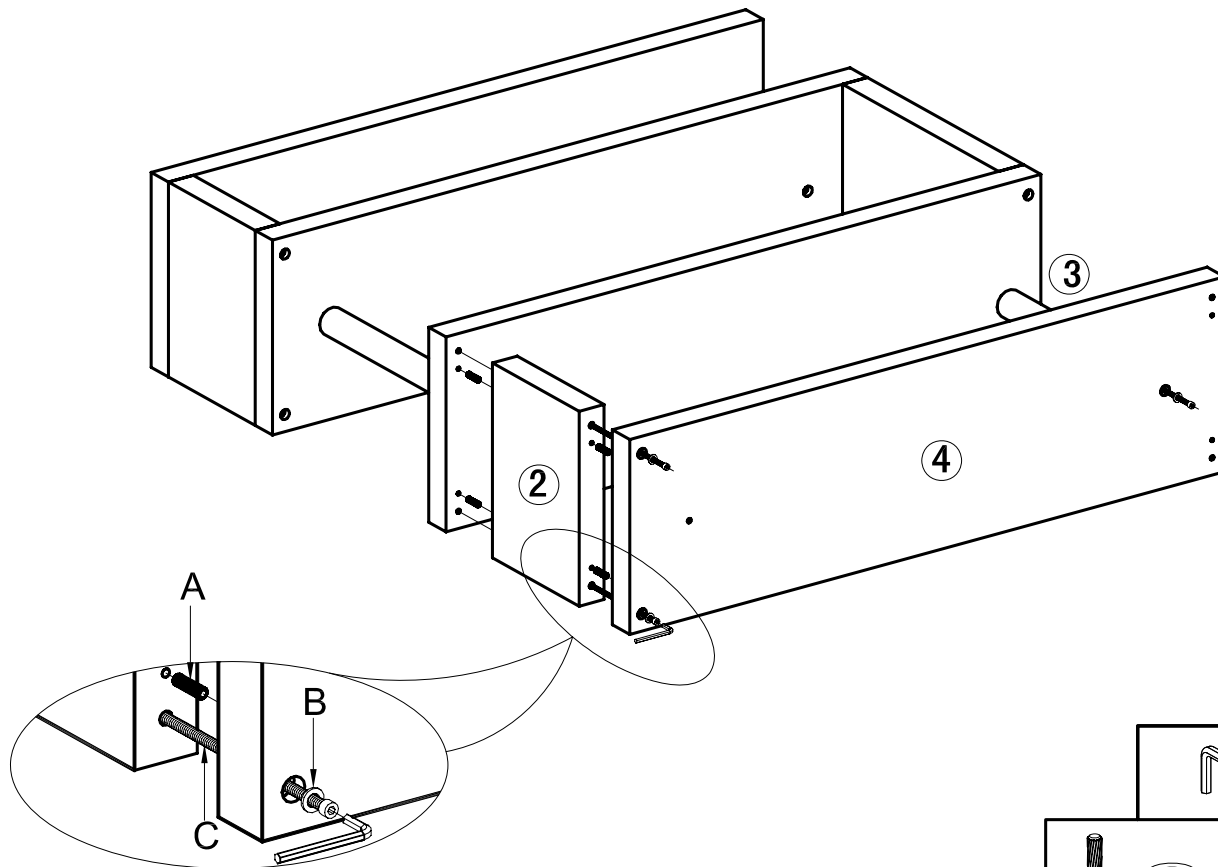

4 ▶

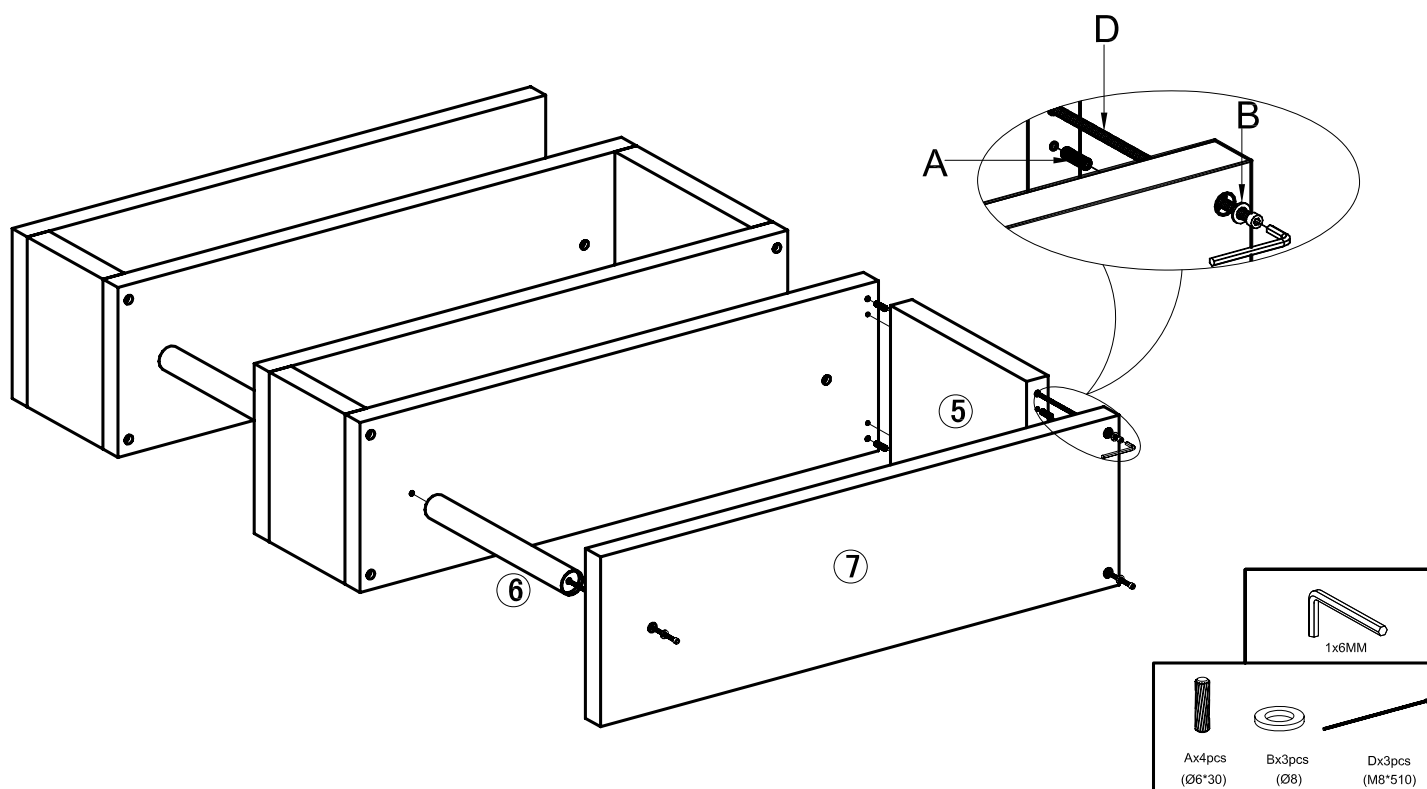

5 ▶

