


dwell



Retro sideboard

113512-White
118746-Claret
119116-Black
140402-Stone

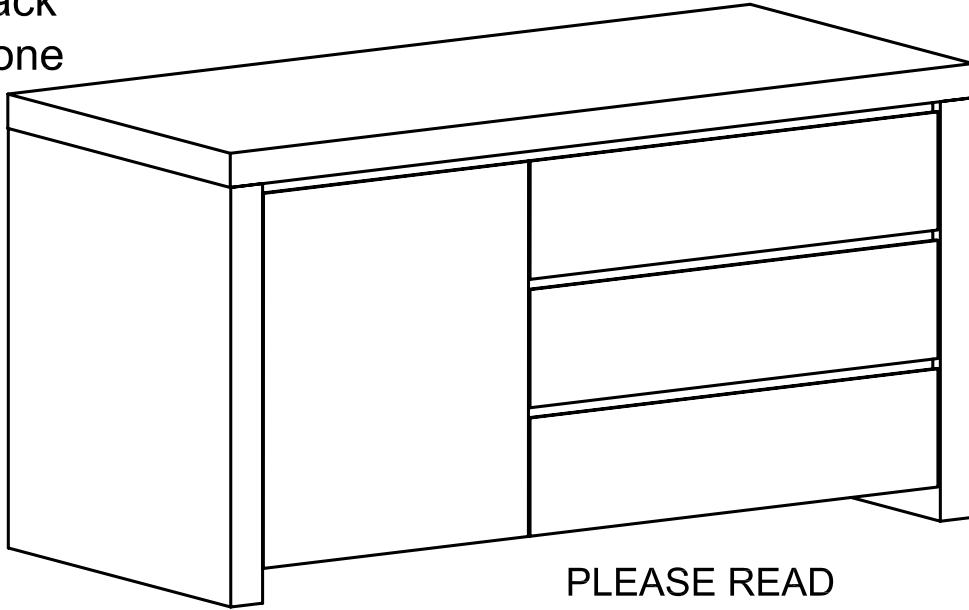


PLEASE READ


- Please read the assembly instructions carefully.
- We can not accept return on any part or fully assembled products.
- Identify each part of the furniture before assembly using the instructions.
- Check all pieces are present and correct.
- Ensure you have all of the correct tools needed for assembly.
- Clear a suitable place to work.
- Never force the fittings together.
- Do not fully tighten any screws until all pieces of the main structure are in place.
- Keep these instructions for future assembly.

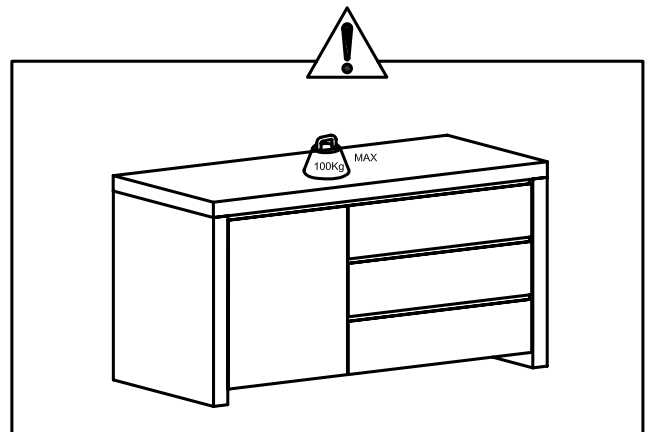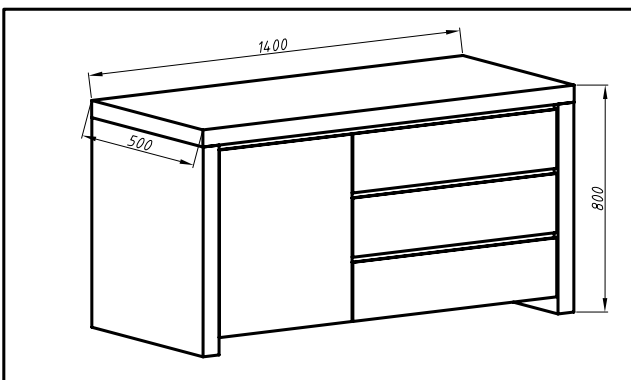

COMPONENTS

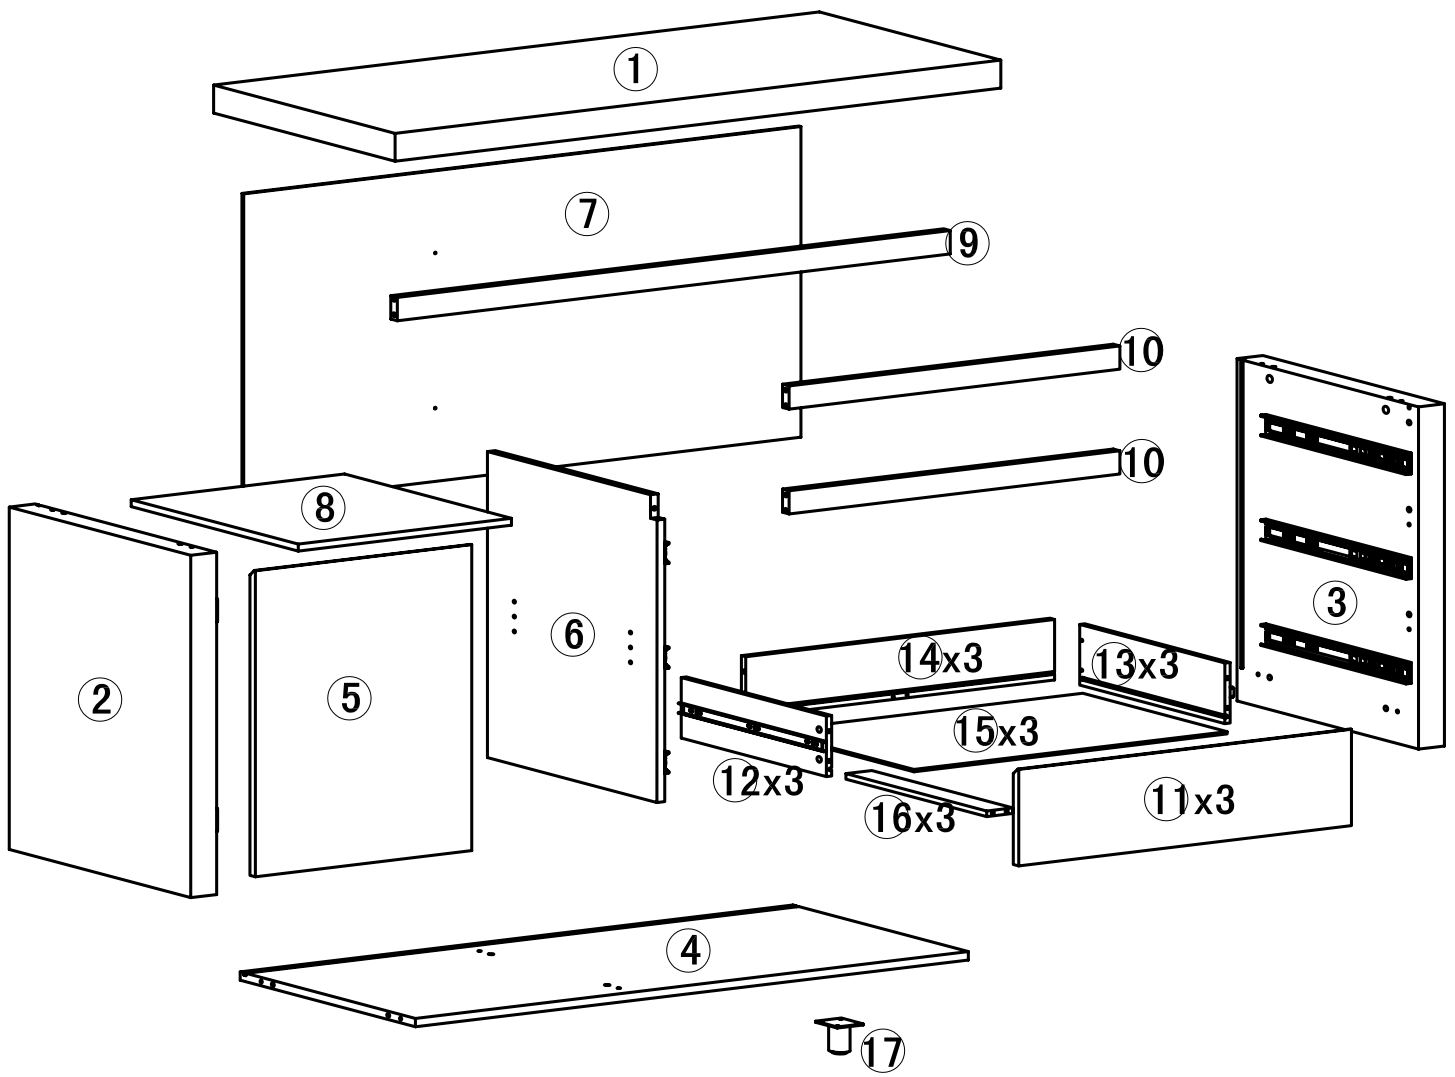

TOOLS NOT INCLUDED



HARDWARE



AX19PCS
(Ø6.5x32)



BX18PCS
(Ø6x30)



CX19PCS
(Ø15x12)



DX36PCS
(Ø7.5x28)



EX36PCS
(Ø13x11)



FX10PCS
(M4x14)




GX4PCS
(Ø6x12)



HX2PCS
(Ø8x2.5)




IX2PCS
(Ø25x0.4)




LX2PCS
(105*63*38)


1 ▷

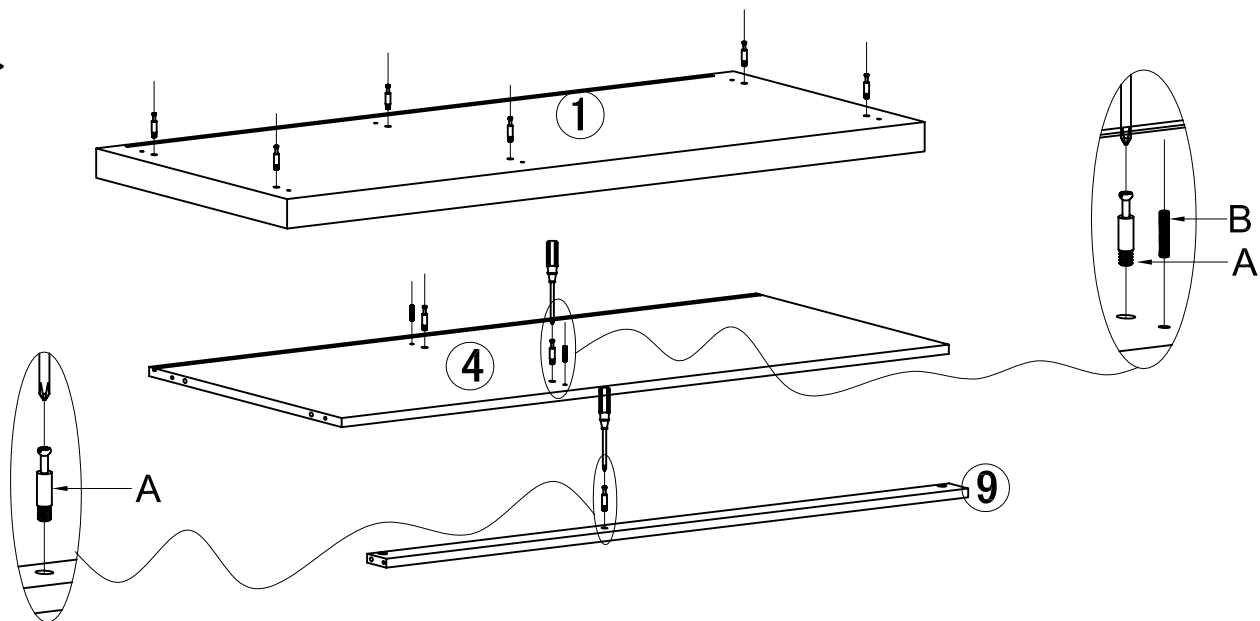


2 ▷

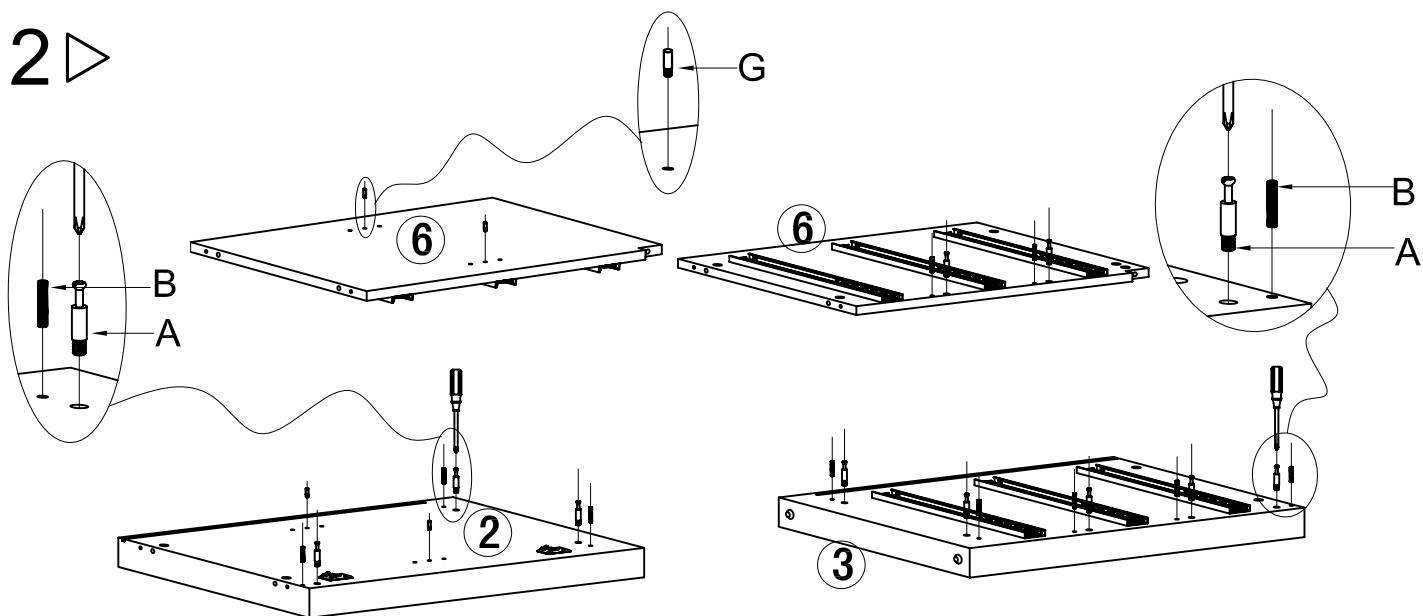


3 ▷

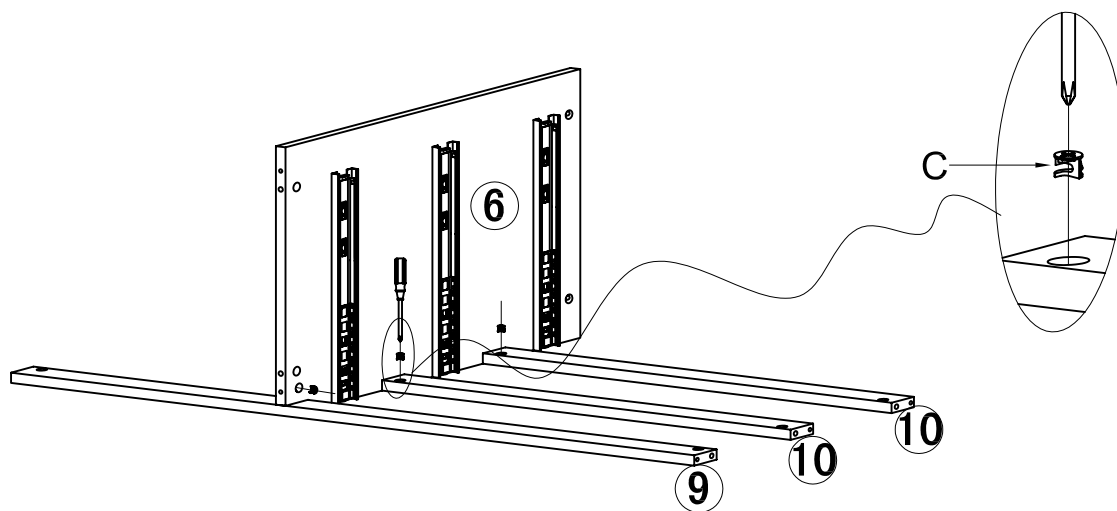


4 ▷

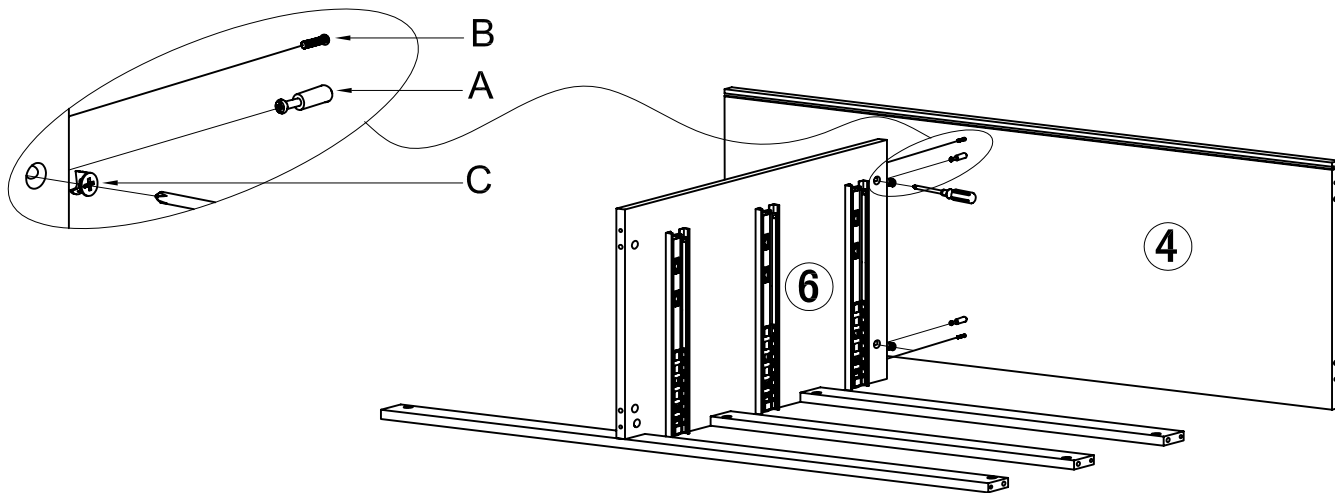


5 ▷

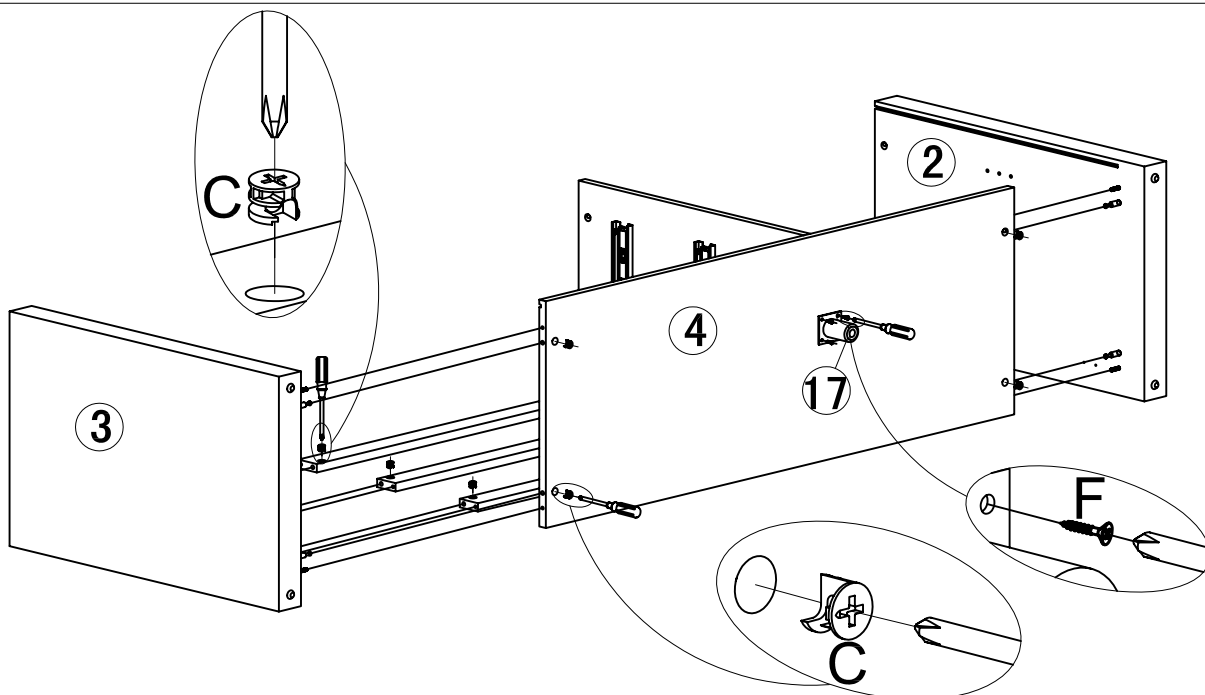


6 ▷

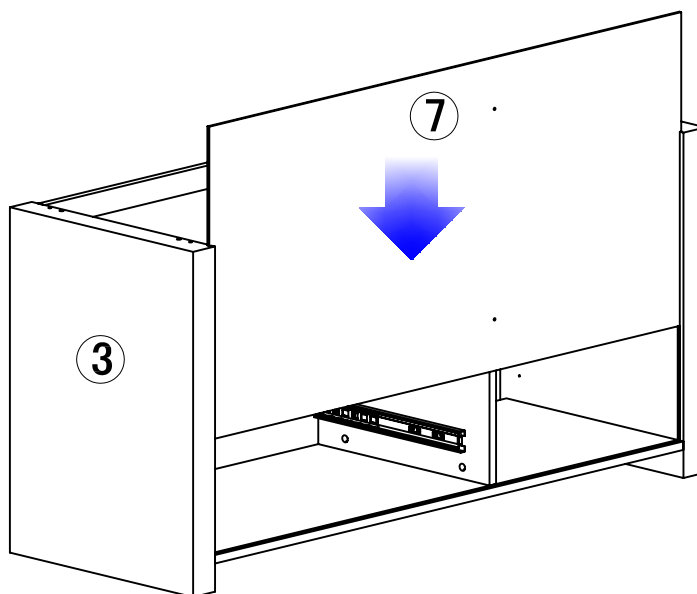


7 ▷

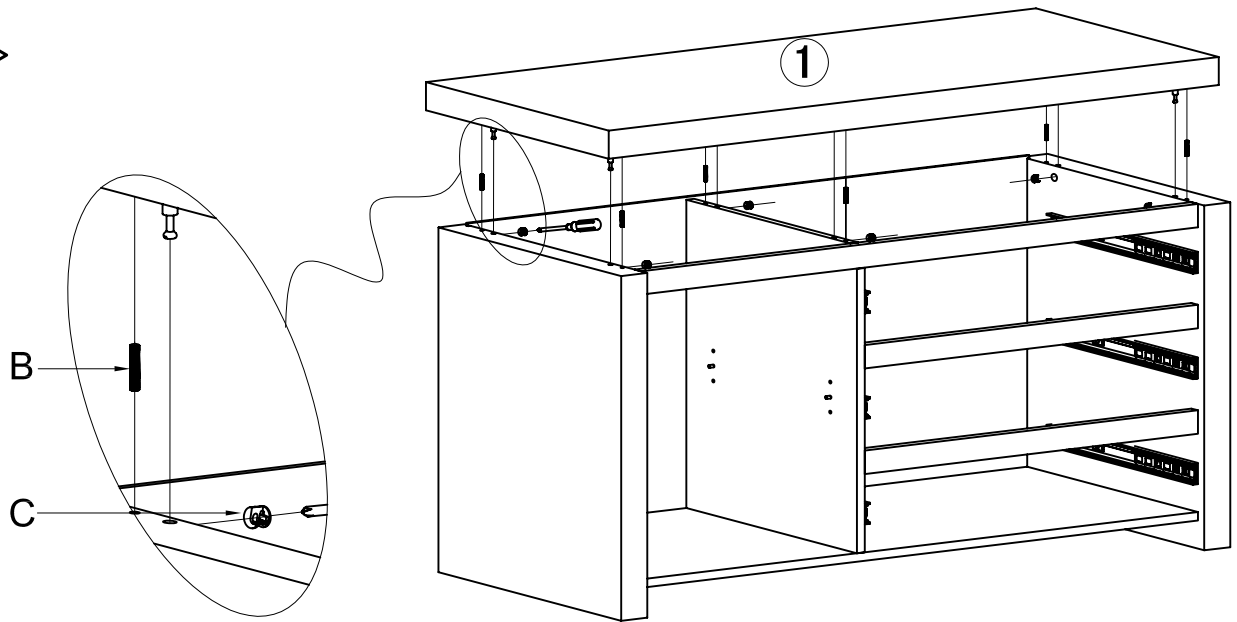


8 ▷

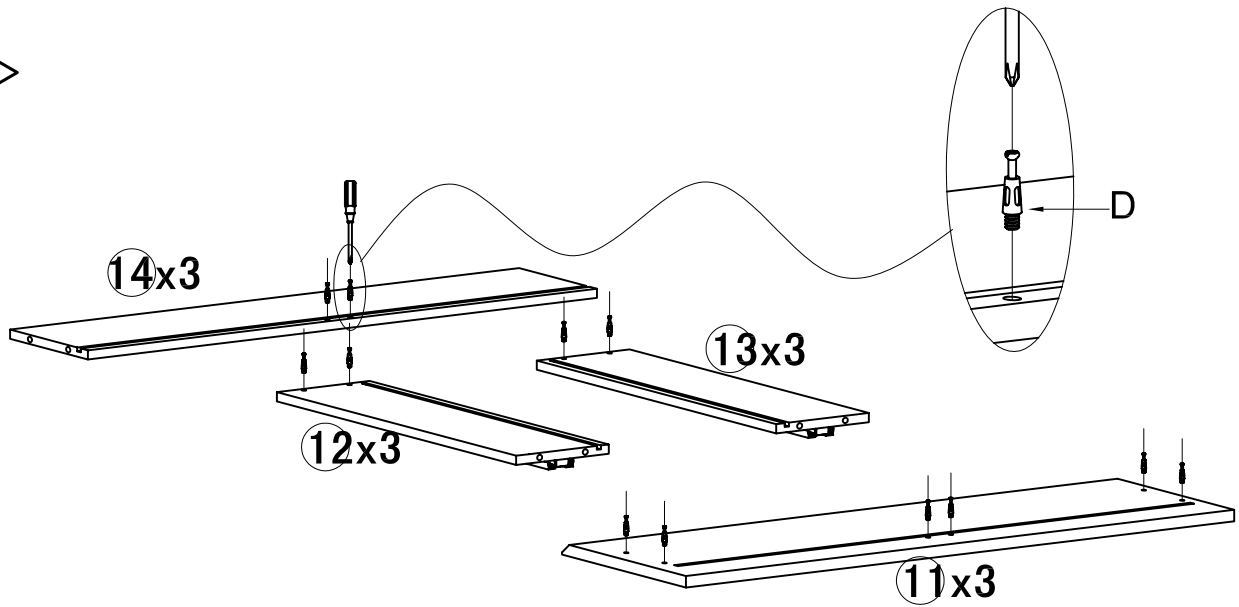


9 ▷

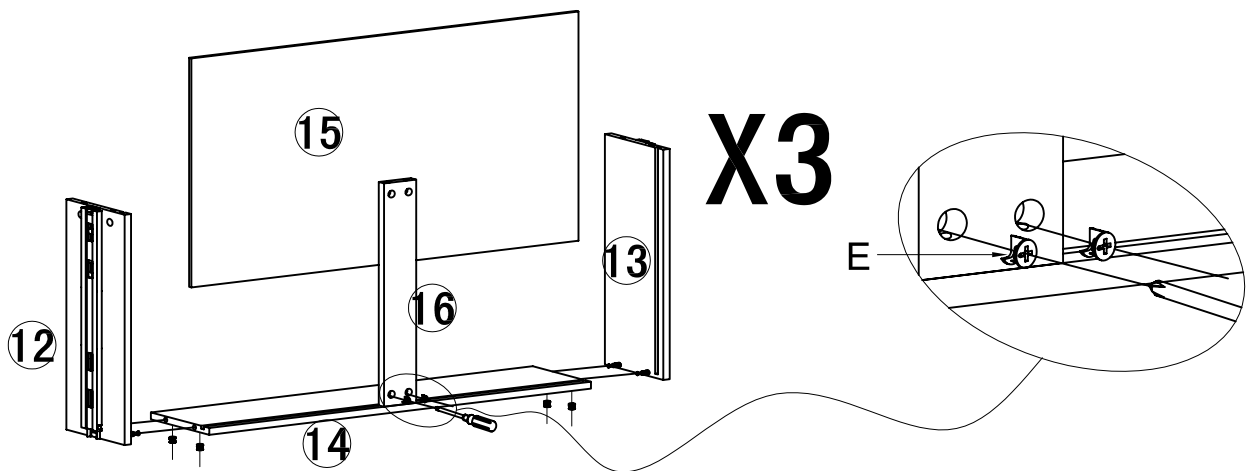


10▷

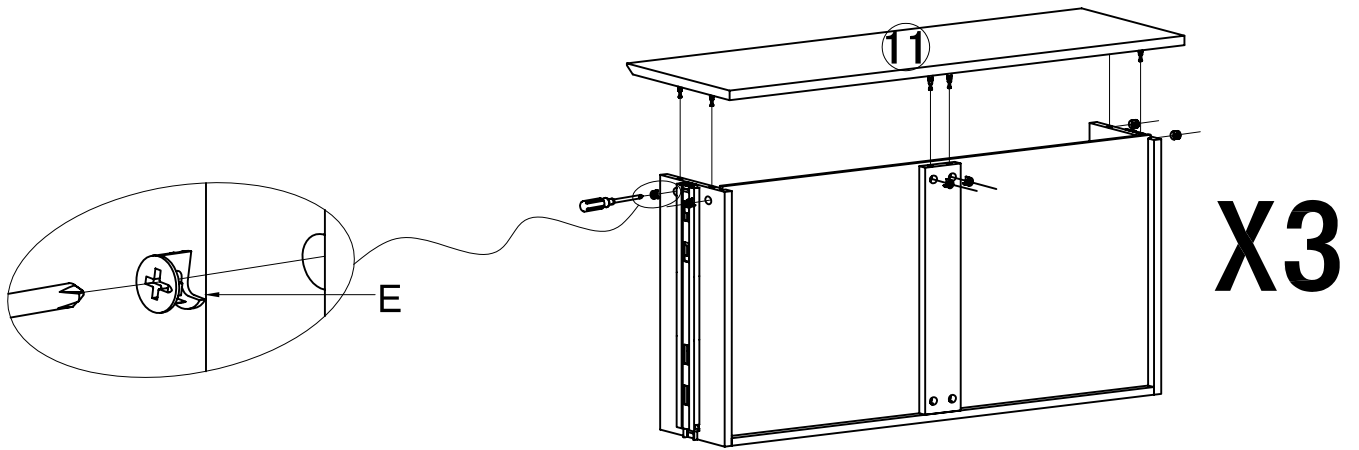


11▷

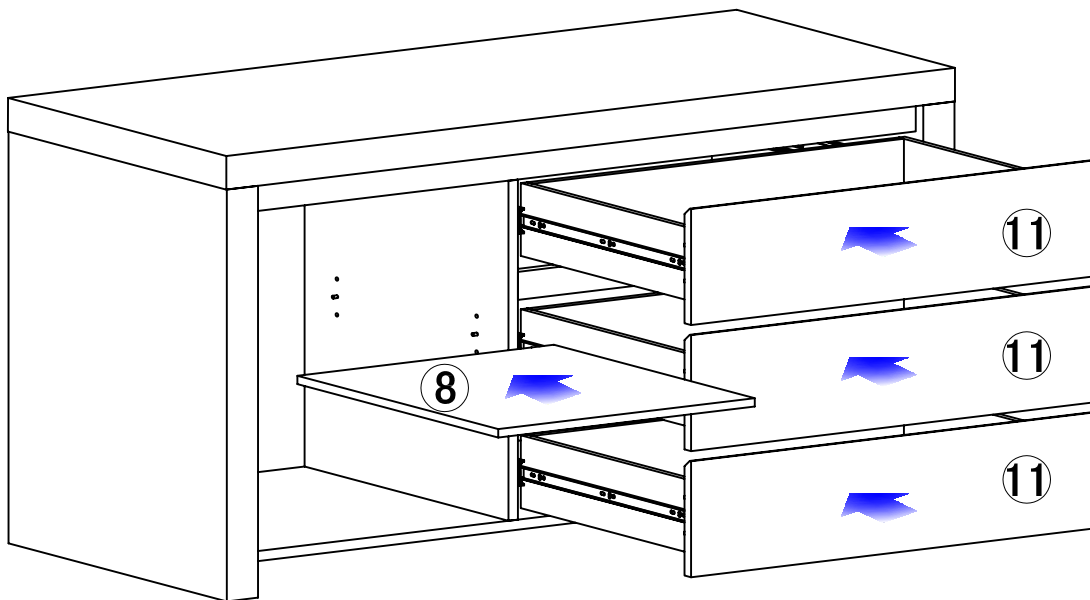


12▷

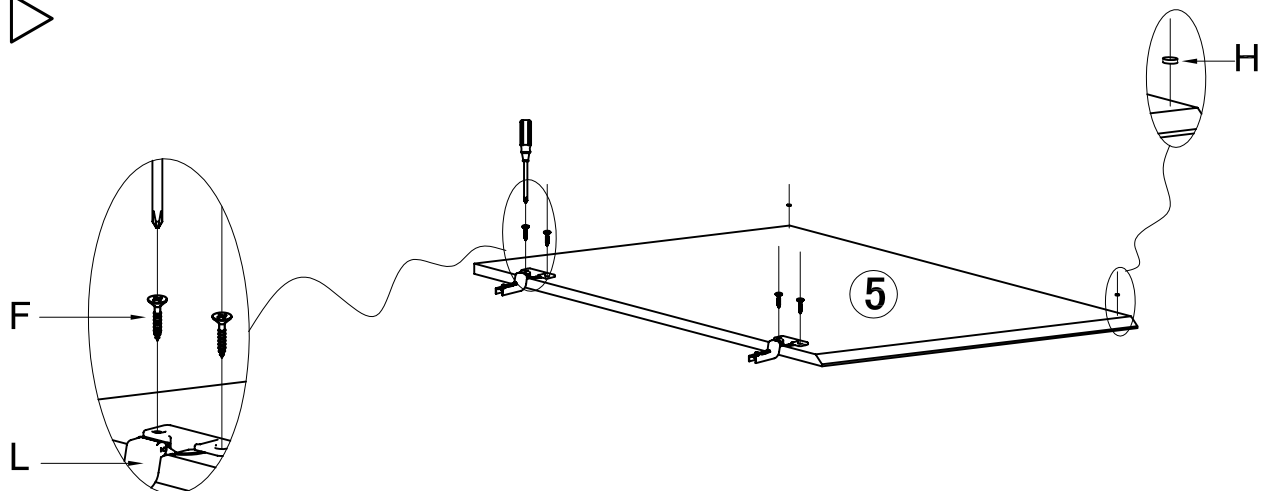

13▷

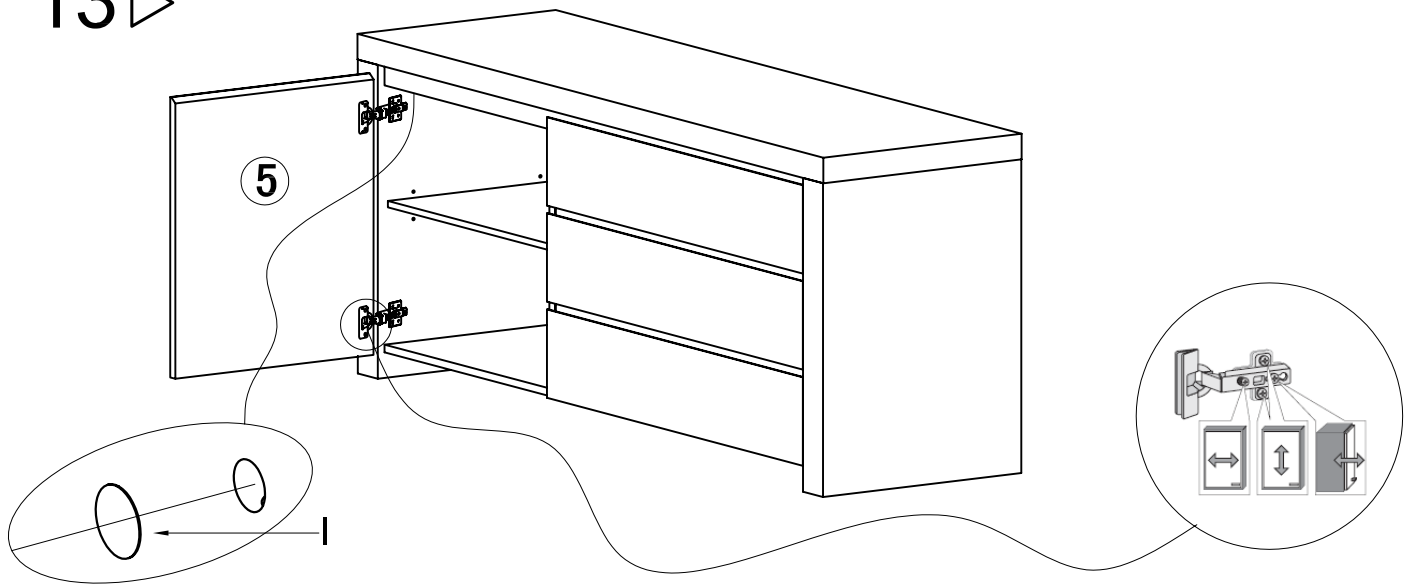

14▷

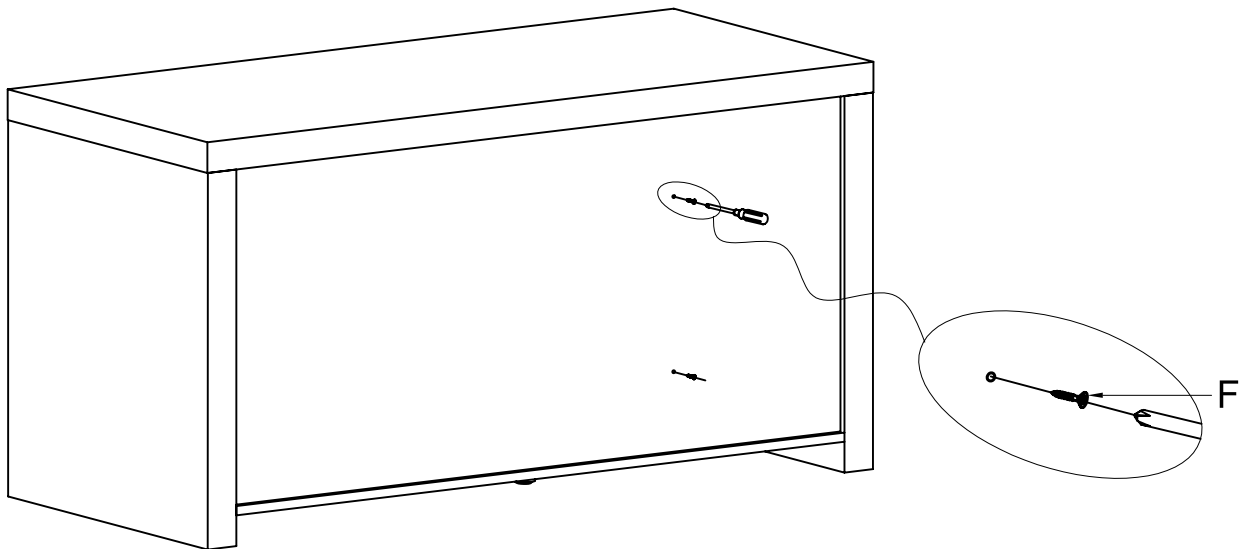

15▷

