


dwell



Compact marilyn dressing table

114266-white
114267-walnut
138816-stone
138818-dark oak

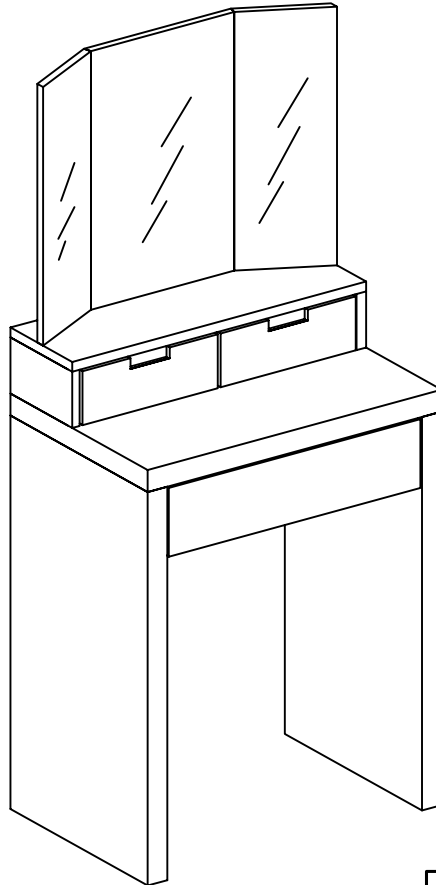


PLEASE READ


- Please read the assembly instructions carefully.
- We can not accept return on any part or fully assembled products.
- Identify each part of the furniture before assembly using the instructions.
- Check all pieces are present and correct.
- Ensure you have all of the correct tools needed for assembly.
- Clear a suitable place to work.
- Never force the fittings together.
- Do not fully tighten any screws until all pieces of the main structure are in place.
- Keep these instructions for future assembly.

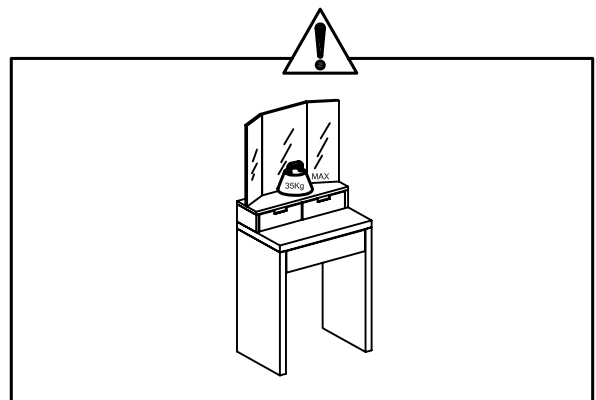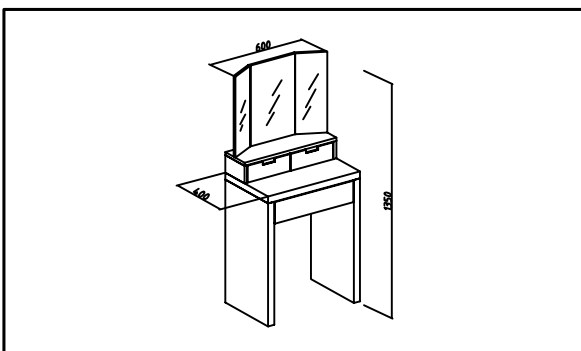

COMPONENTS

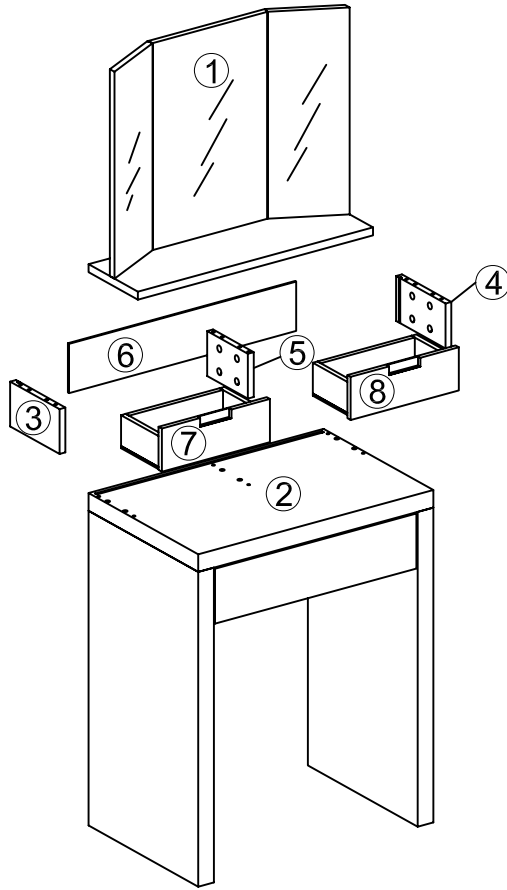

TOOLS NOT INCLUDED



HARDWARE



Ax12 pcs
(Ø6.5*32)





Bx12 pcs
(Ø15*12)



Cx12 pcs
(Ø6*30)

1 ▶


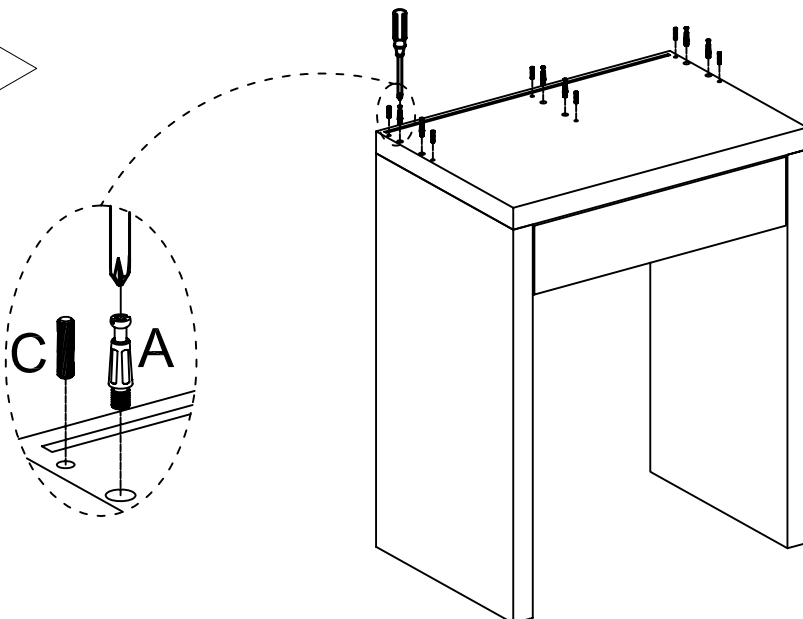


Ax6 pcs
(Ø6.5*32)





Cx6 pcs
(Ø6*30)

2 ▶

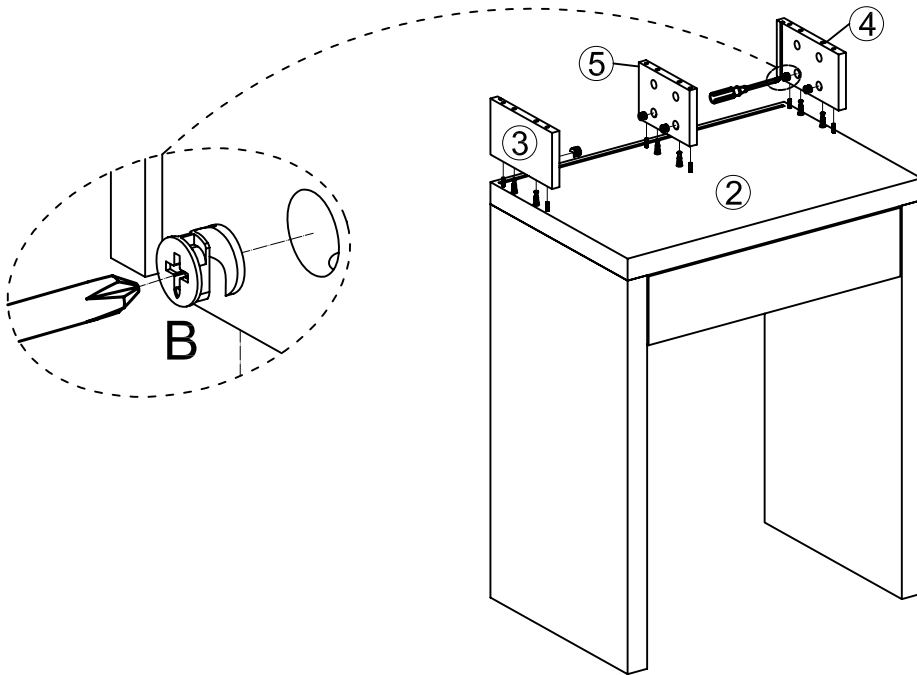

Bx6 pcs
(Ø15*12)

3 ▶



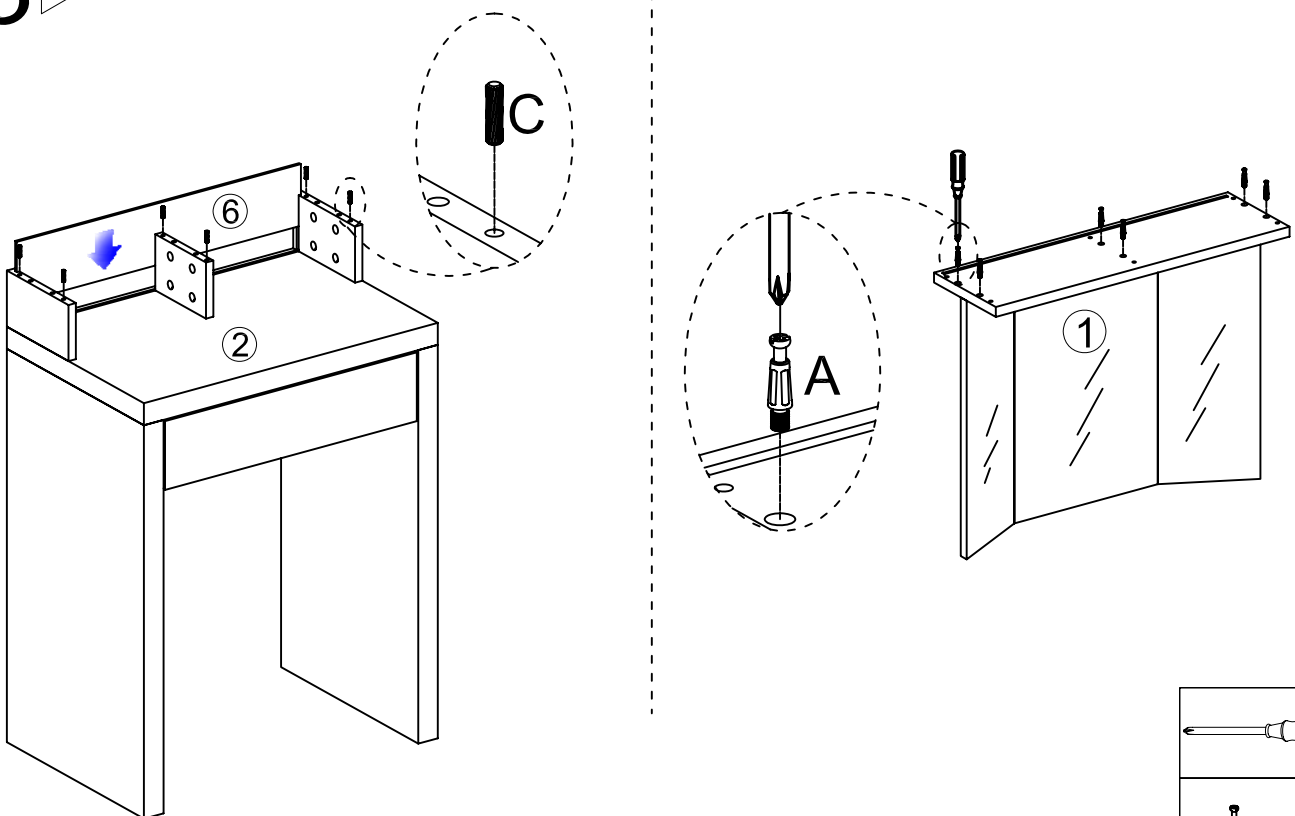


Ax6 pcs
(Ø6.5*32)



Cx6 pcs
(Ø6*30)

4 ▶

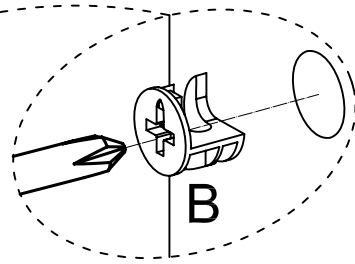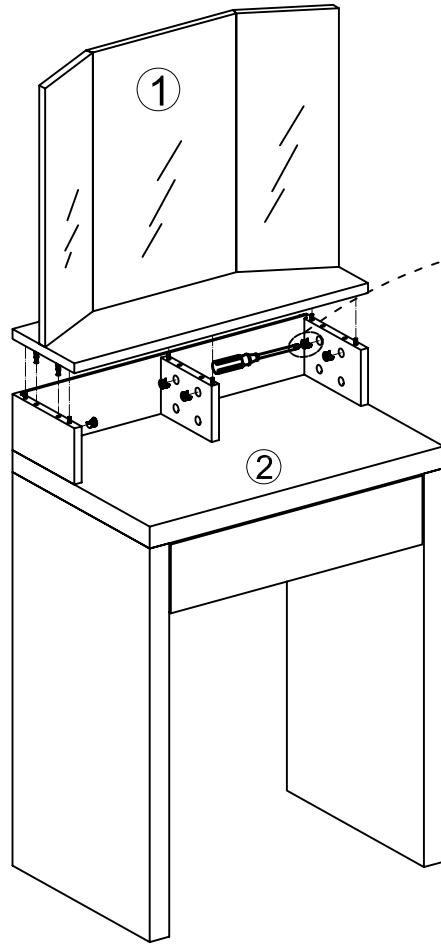

Bx6 pcs
(Ø15*12)

5 ▶

