


# dwell



## Retro sideboard

113512-White  
118746-Claret  
119116-Black  
140402-Stone

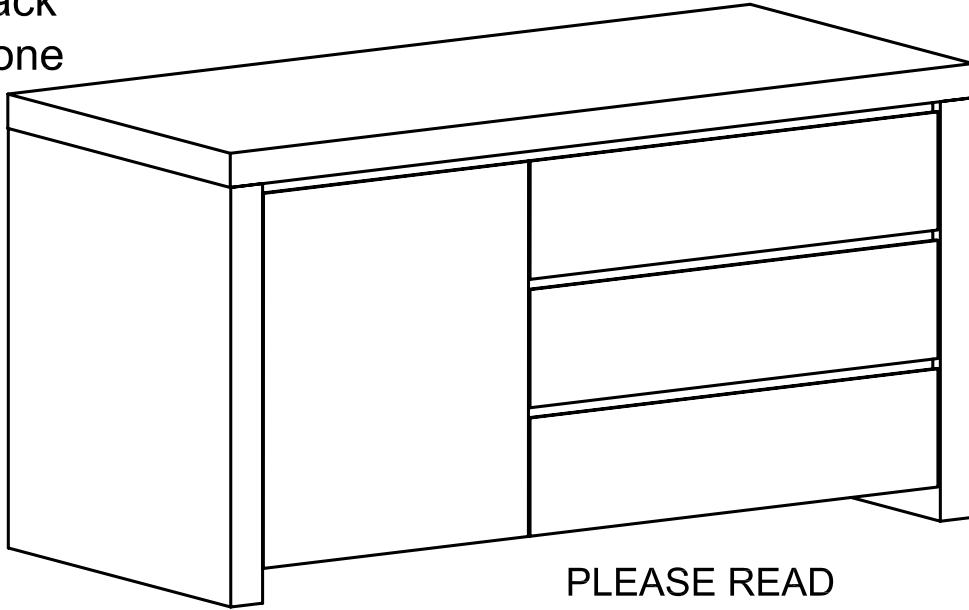


### PLEASE READ


- Please read the assembly instructions carefully.
- We can not accept return on any part or fully assembled products.
- Identify each part of the furniture before assembly using the instructions.
- Check all pieces are present and correct.
- Ensure you have all of the correct tools needed for assembly.
- Clear a suitable place to work.
- Never force the fittings together.
- Do not fully tighten any screws until all pieces of the main structure are in place.
- Keep these instructions for future assembly.

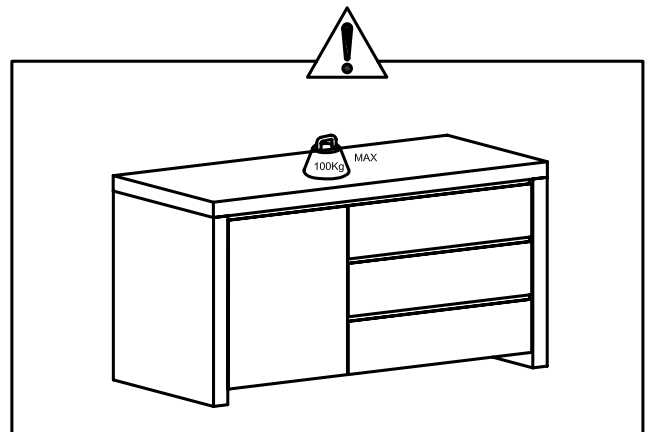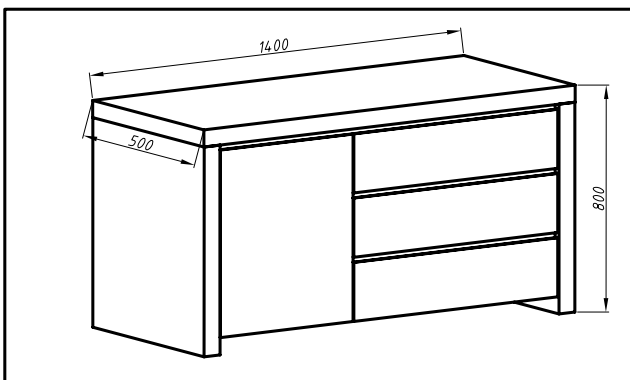

# COMPONENTS

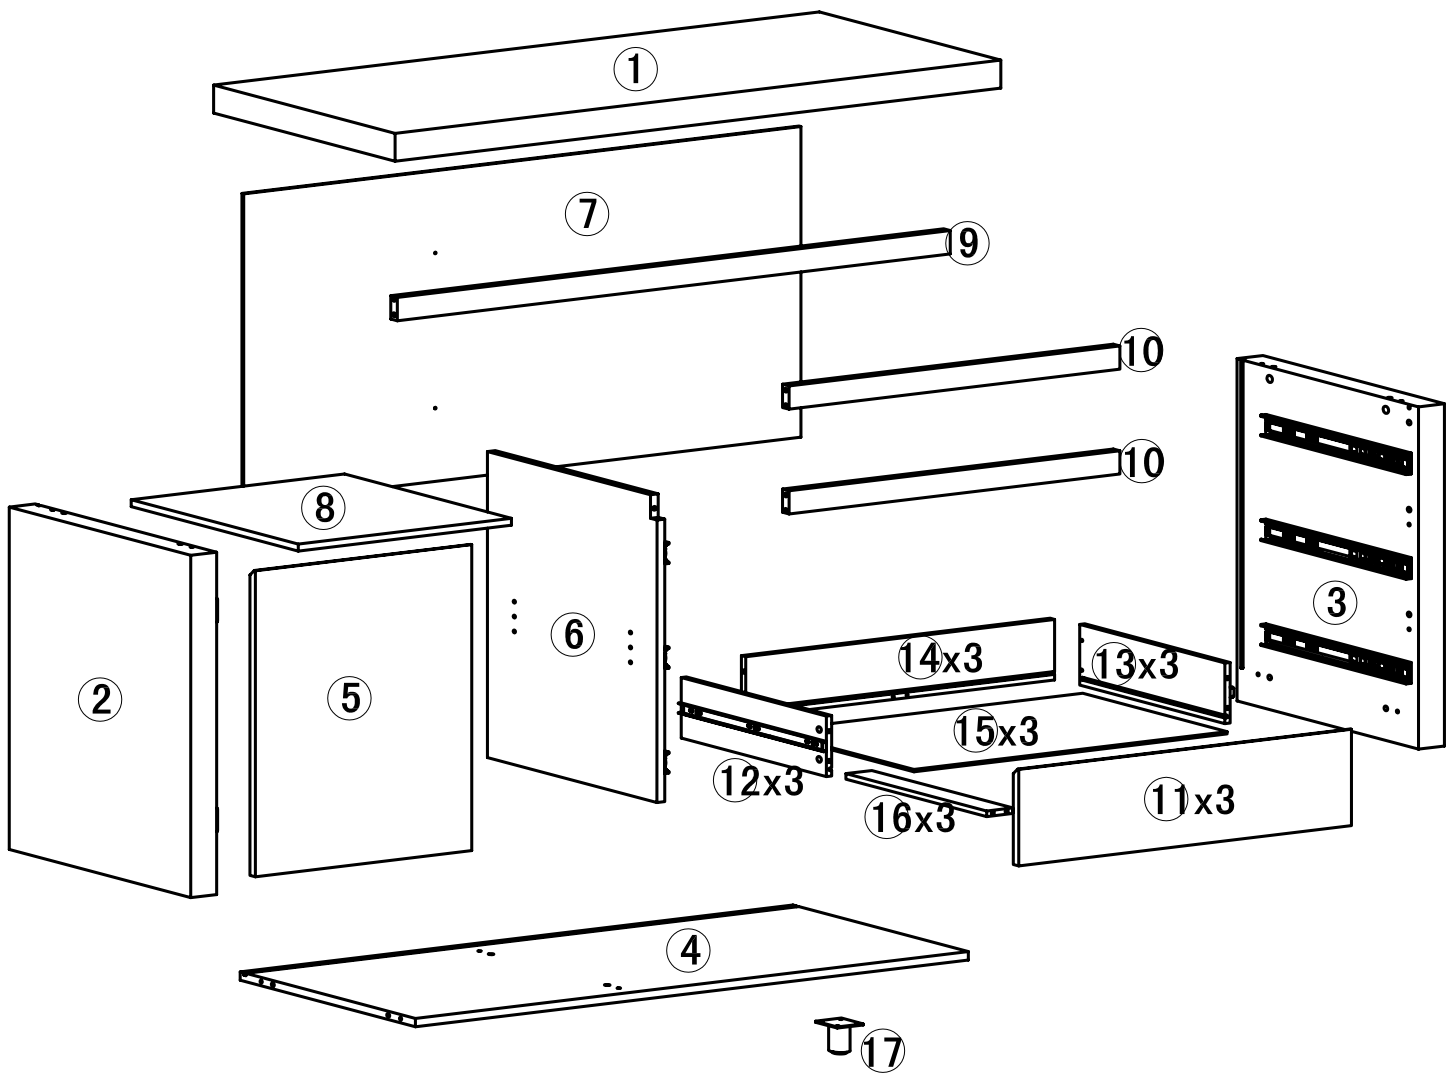

## TOOLS NOT INCLUDED



## HARDWARE



AX19PCS  
(Ø6.5x32)



BX18PCS  
(Ø6x30)



CX19PCS  
(Ø15x12)



DX36PCS  
(Ø7.5x28)



EX36PCS  
(Ø13x11)



FX10PCS  
(M4x14)




GX4PCS  
(Ø6x12)



HX2PCS  
(Ø8x2.5)




IX2PCS  
(Ø25x0.4)




LX2PCS  
(105\*63\*38)


1 ▷

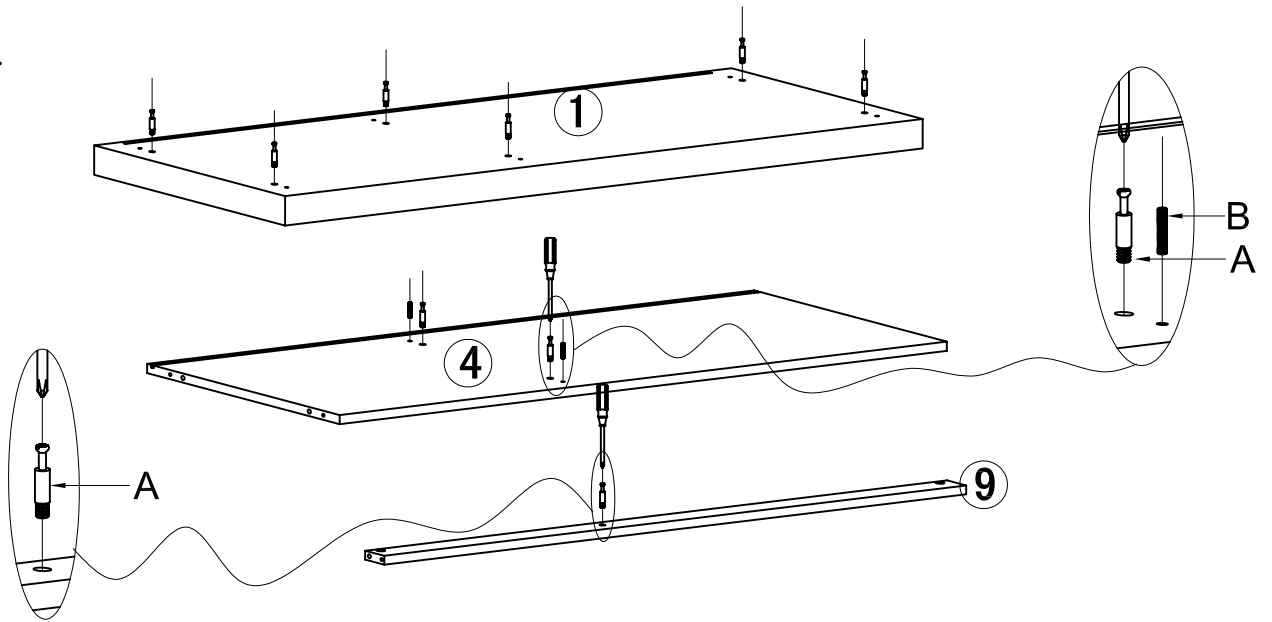


2 ▷

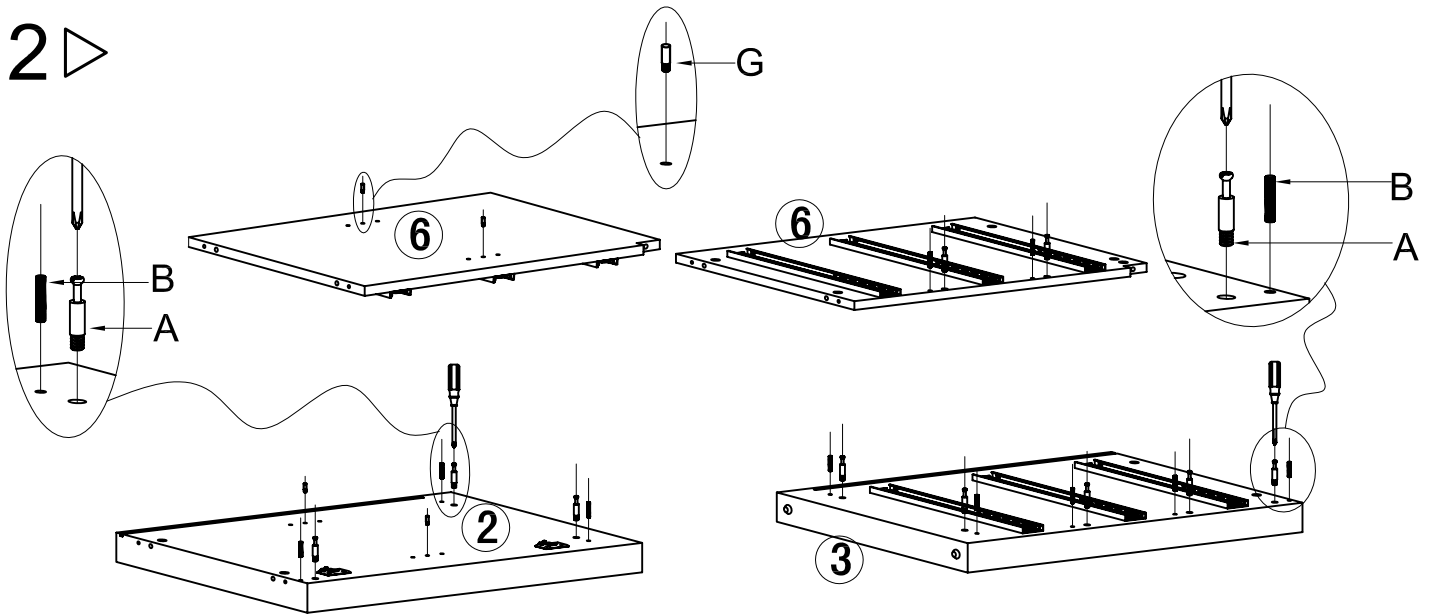


3 ▷

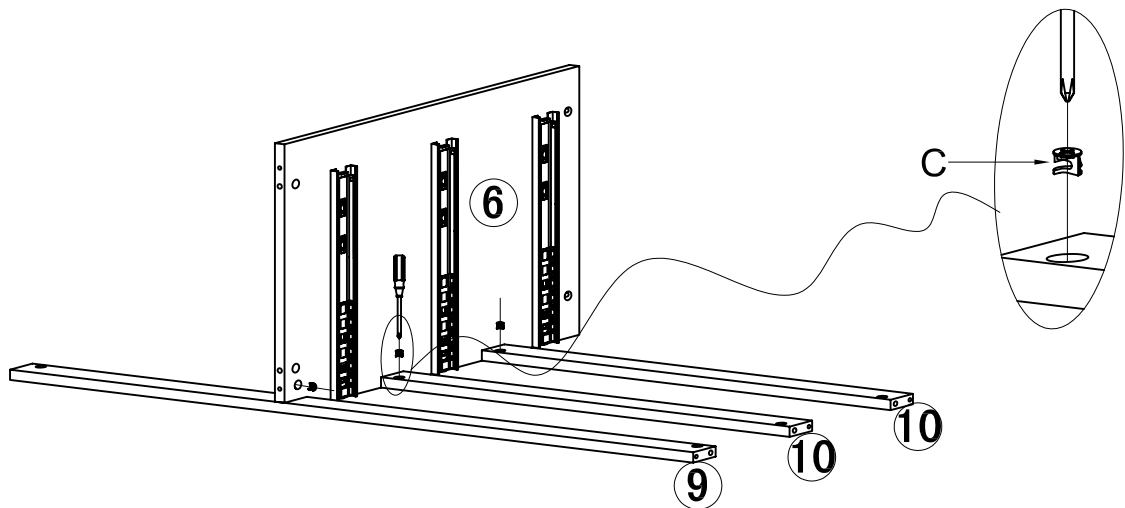


4 ▷

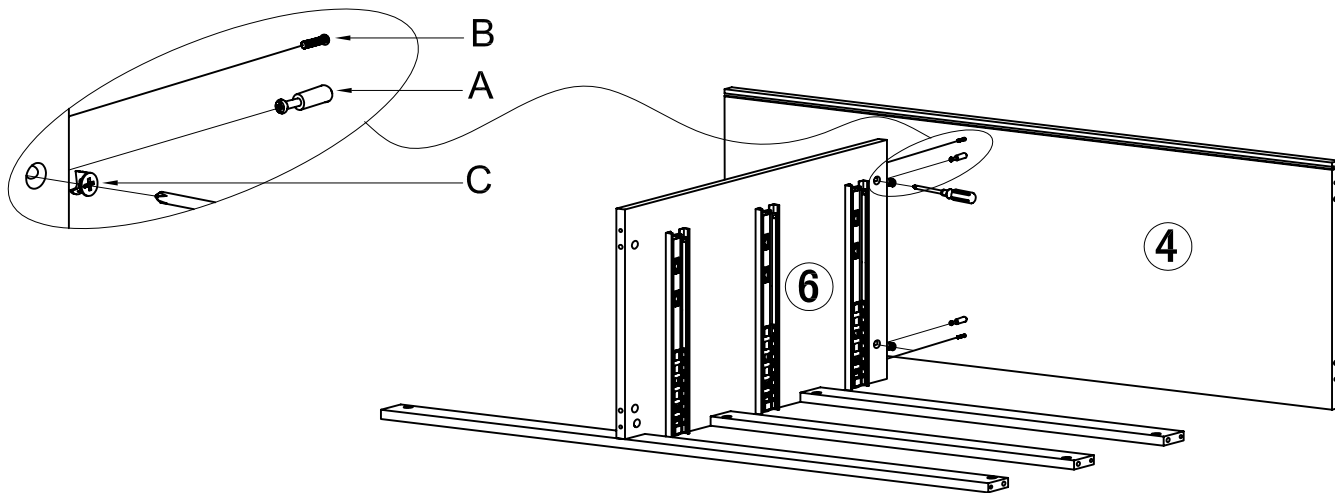


5 ▷

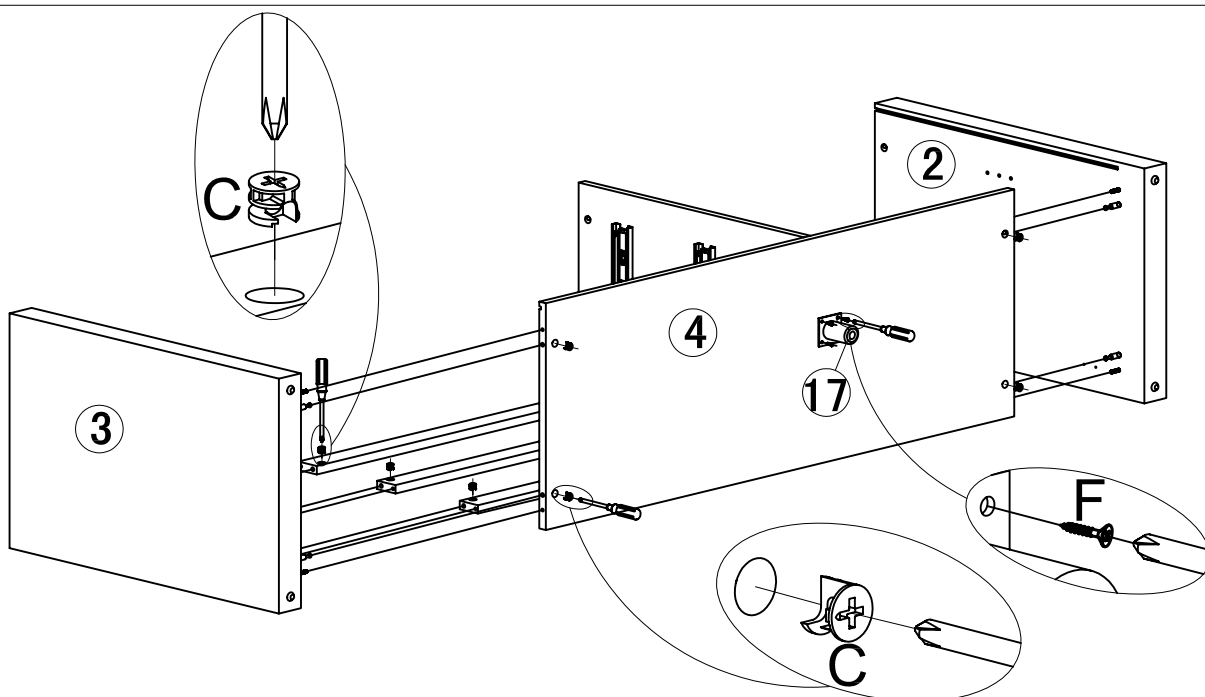


6 ▷

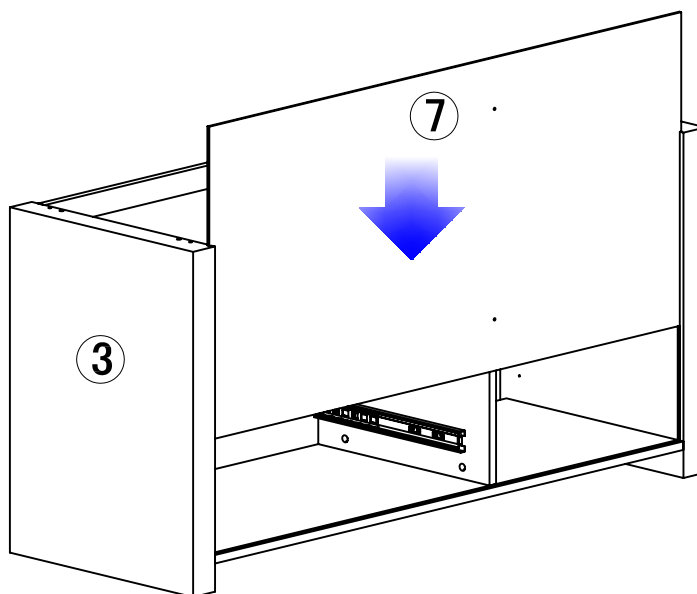


7 ▷

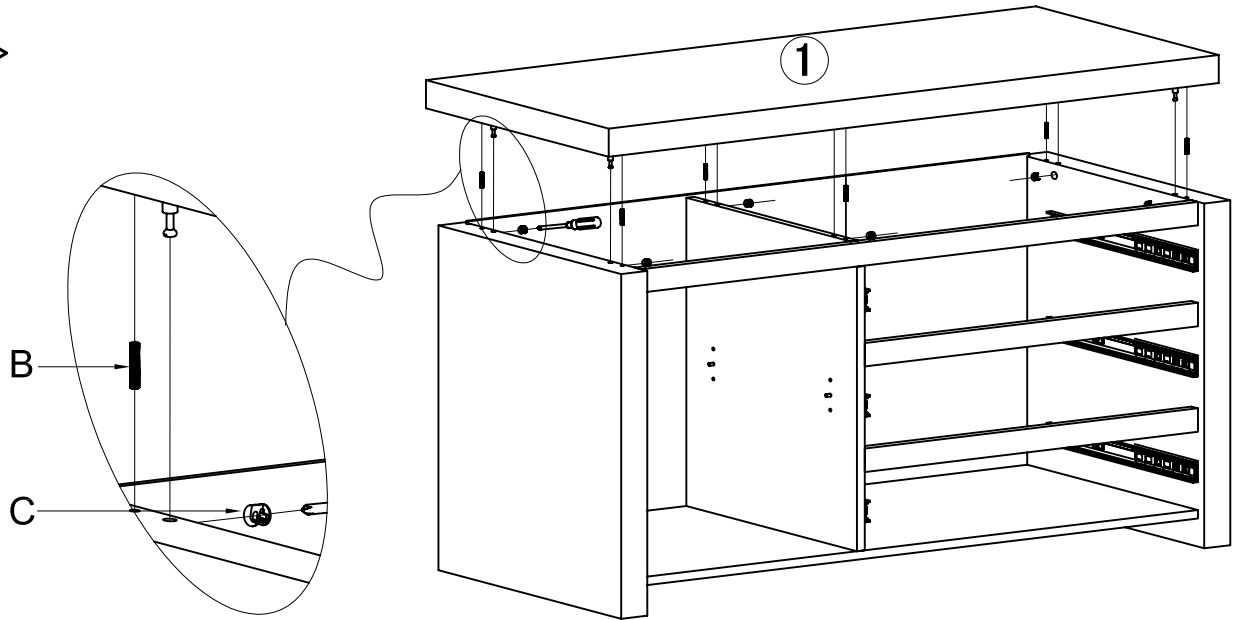


8 ▷

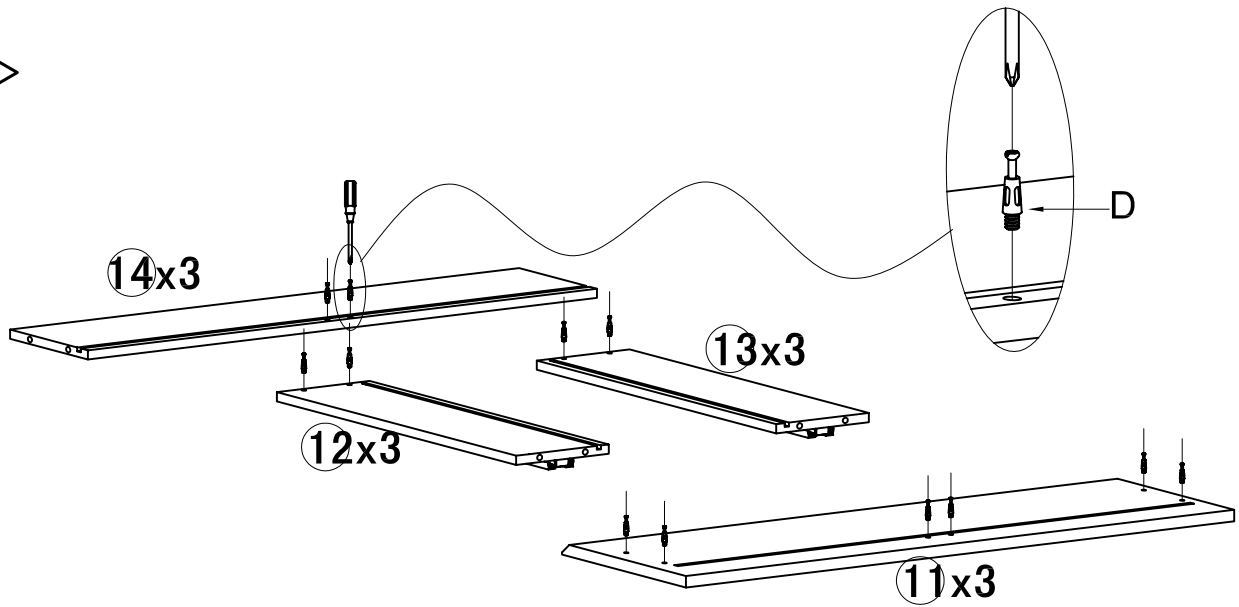


9 ▷

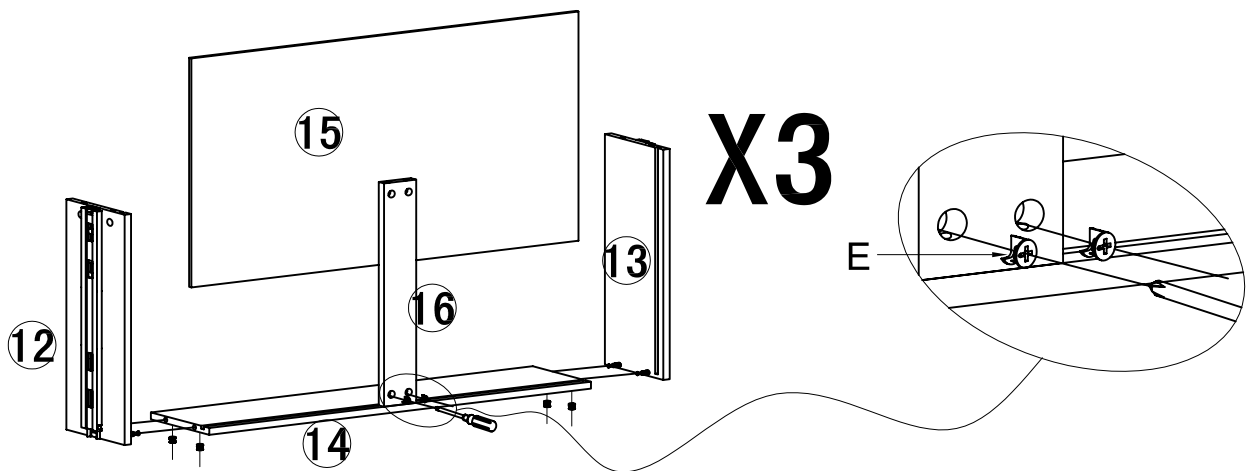


10▷

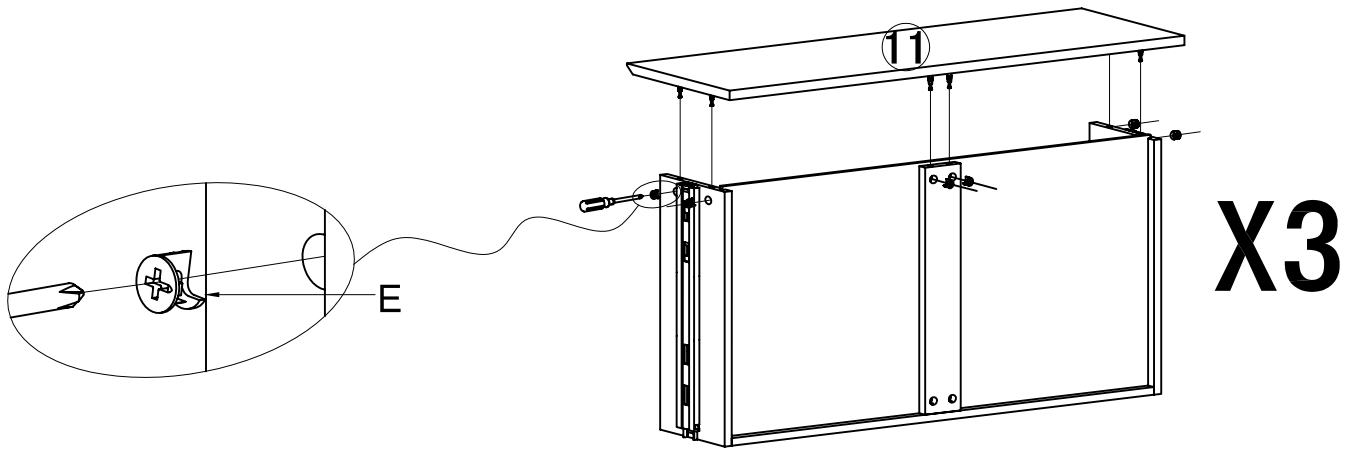


11▷

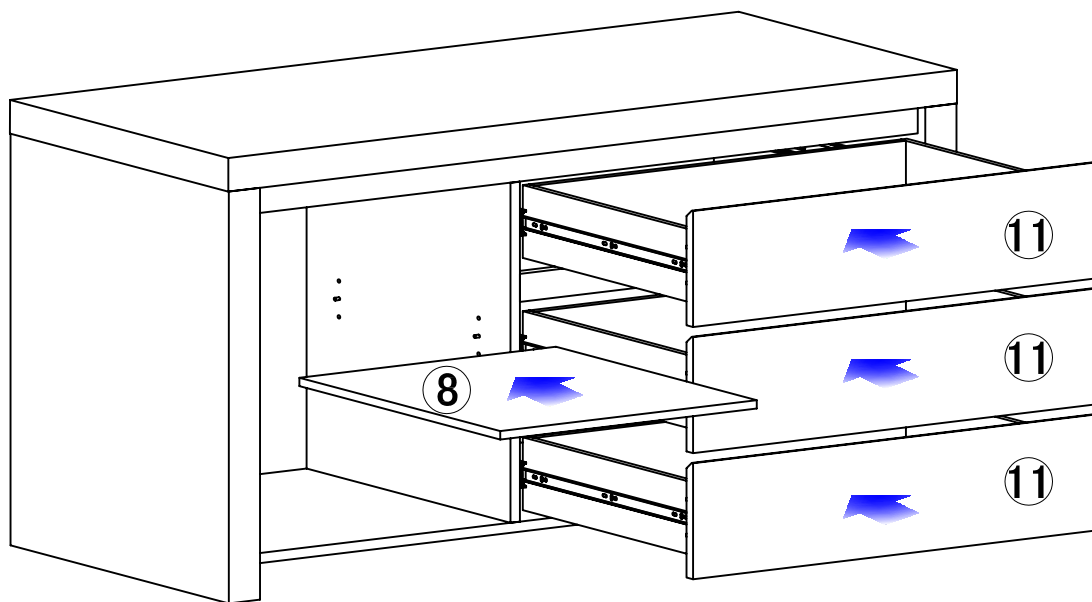


12▷

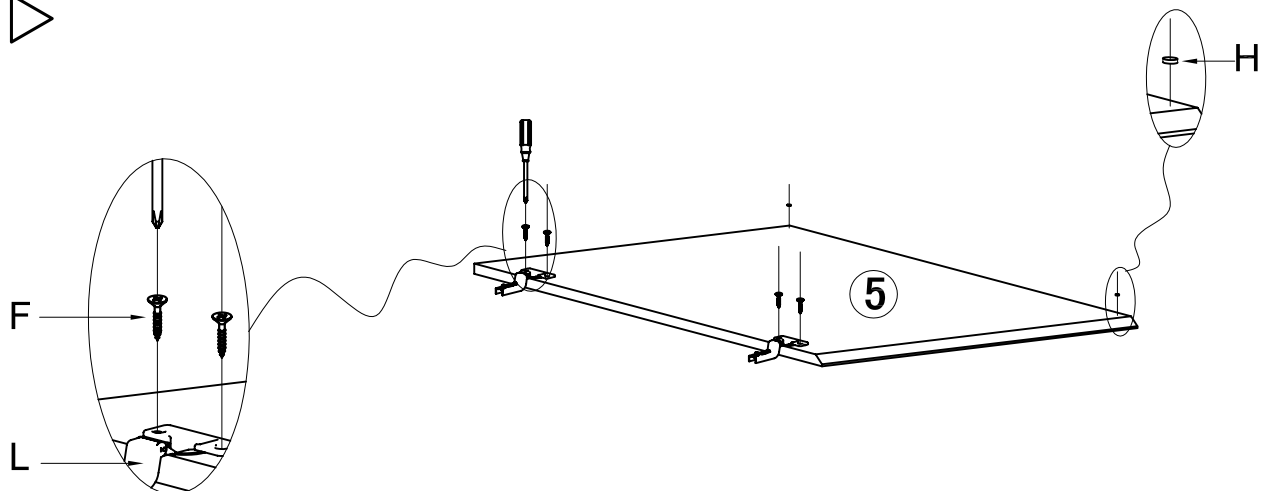

13▷

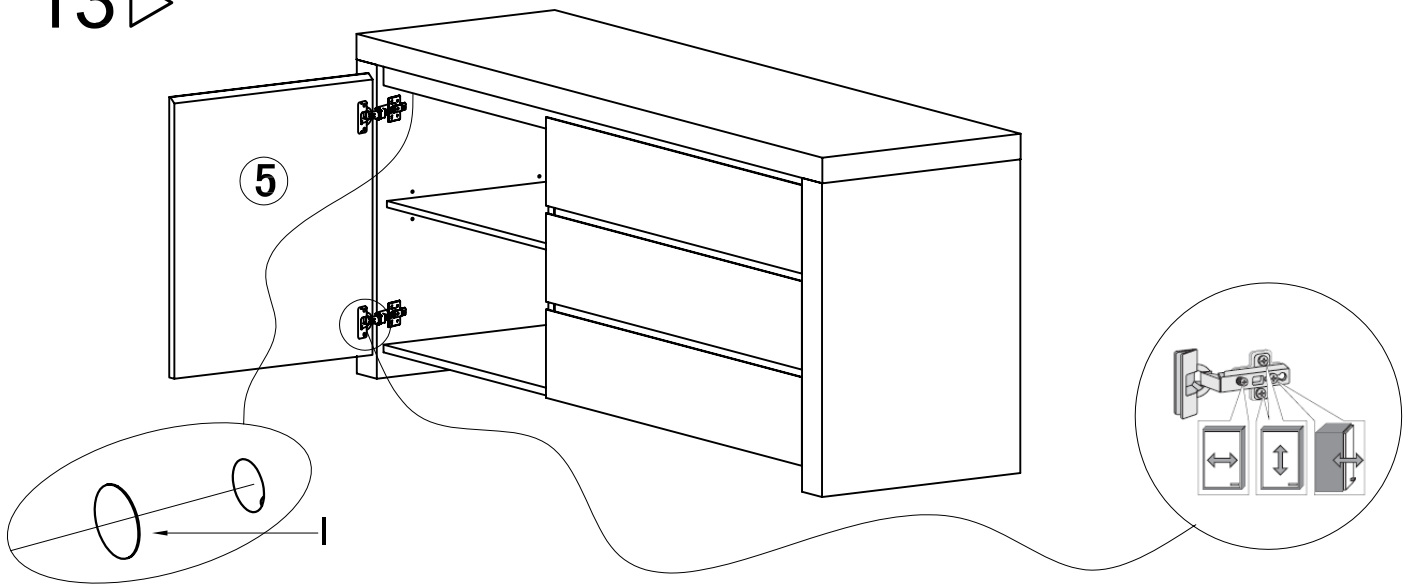

14▷

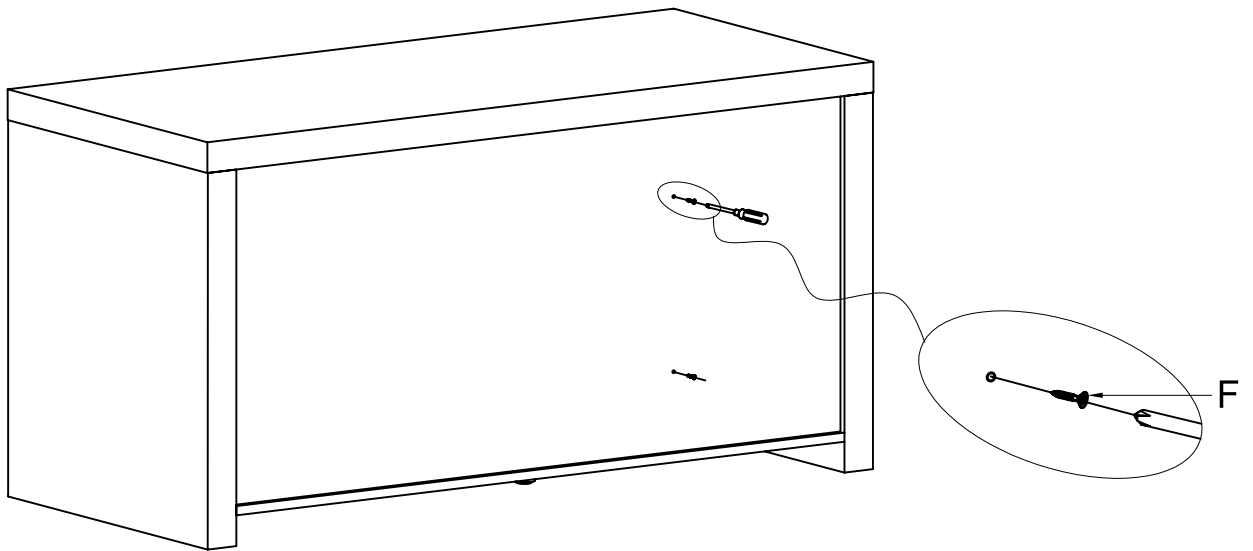

15▷

