


dwell



Bedside Table

141506 Natural Walnut

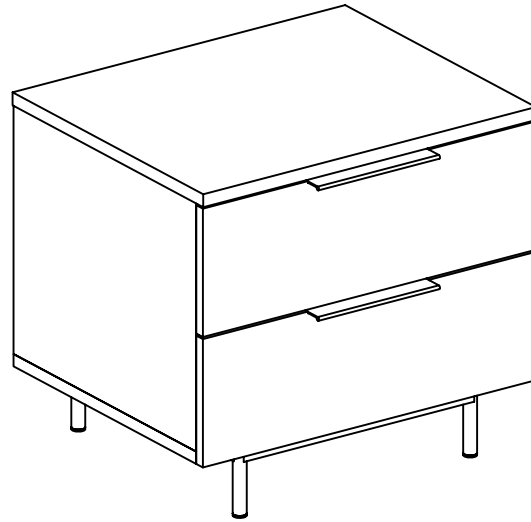


PLEASE READ


- Please read the assembly instructions carefully.
- We can not accept return on any part or fully assembled products.
- Identify each part of the furniture before assembly using the instructions.
- Check all pieces are present and correct.
- Ensure you have all of the correct tools needed for assembly.
- Clear a suitable place to work.
- Never force the fittings together.
- Do not fully tighten any screws until all pieces of the main structure are in place.
- Keep these instructions for future assembly.

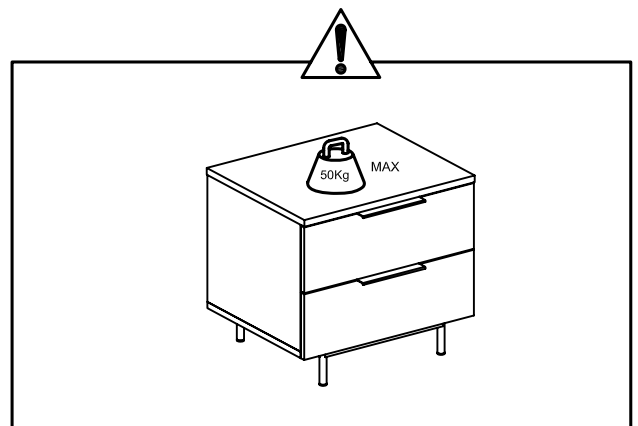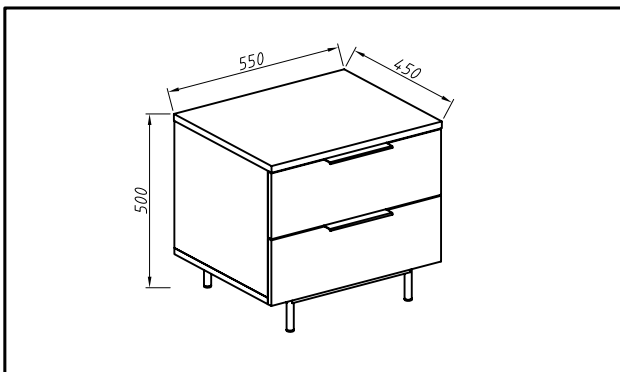


COMPONENTS

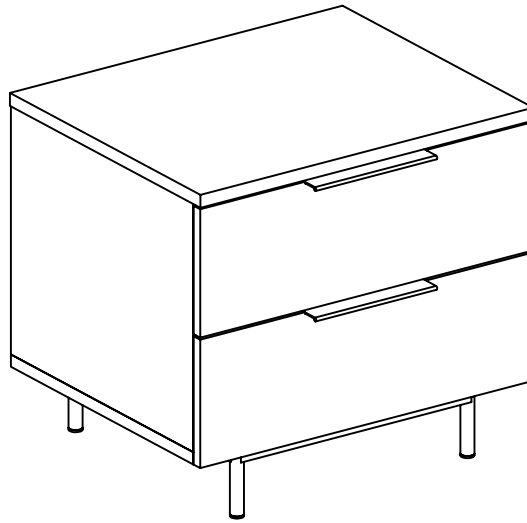

TOOLS NOT INCLUDED



HARDWARE








Ax2 pcs
(40*20*200)



Bx4 pcs
(M3. 5*12)

1

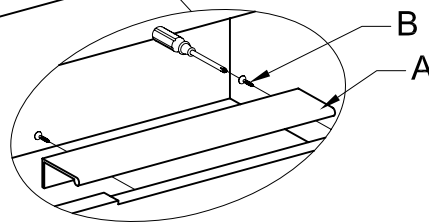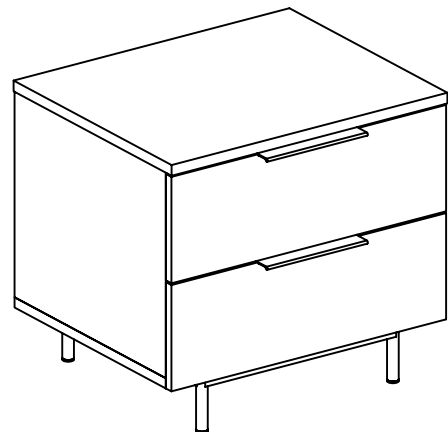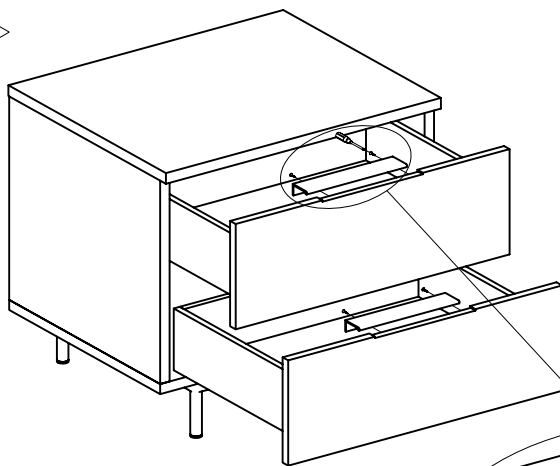

Ax2 pcs
(40*20*200)



Bx4 pcs
(M3. 5*12)