


dwell

AI-SN-S872B



Verona left hand corner sofa bed with chaise storage

143796-Mocha
143798-Charcoal

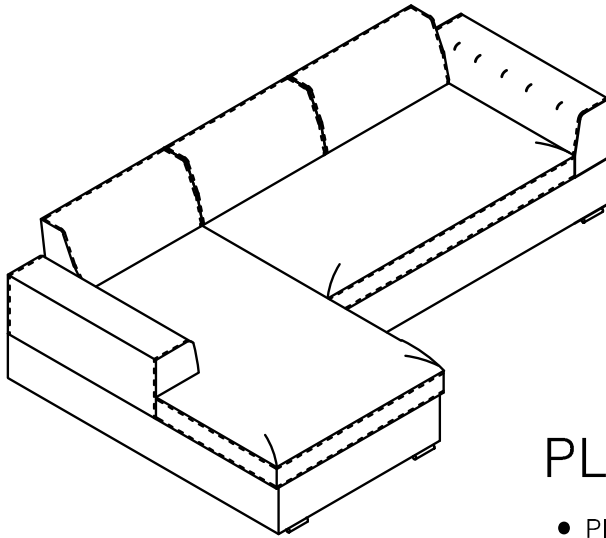

PLEASE READ

- Please read the assembly instructions carefully.
- We cannot accept return on any part or fully assembled products.
- Identify each part of the furniture before assembly using the instructions.
- Check all pieces are present and correct.
- Ensure you have all of the correct tools needed for assembly.
- Clear a suitable place to work.
- Never force the fittings together.
- Do not fully tighten any screws until all pieces of the main structure are in place.
- Keep these instructions for future assembly.

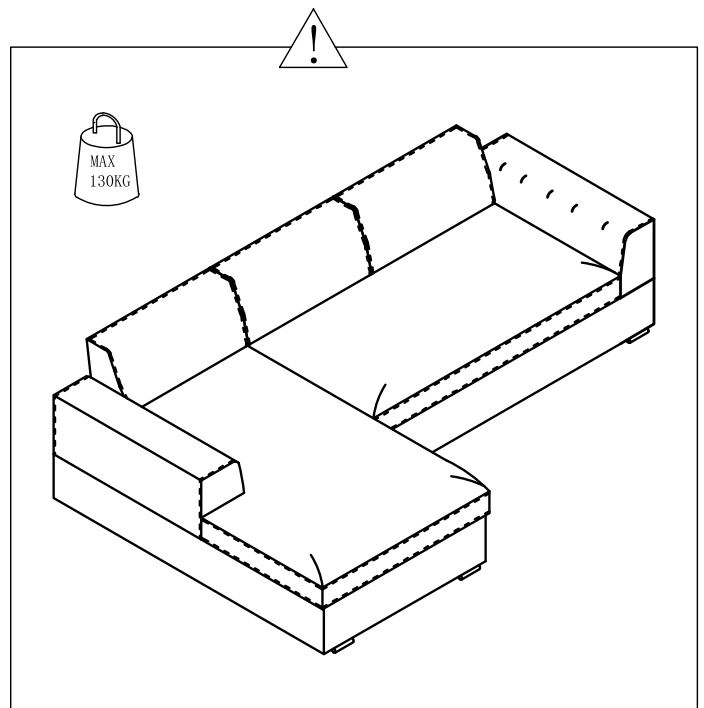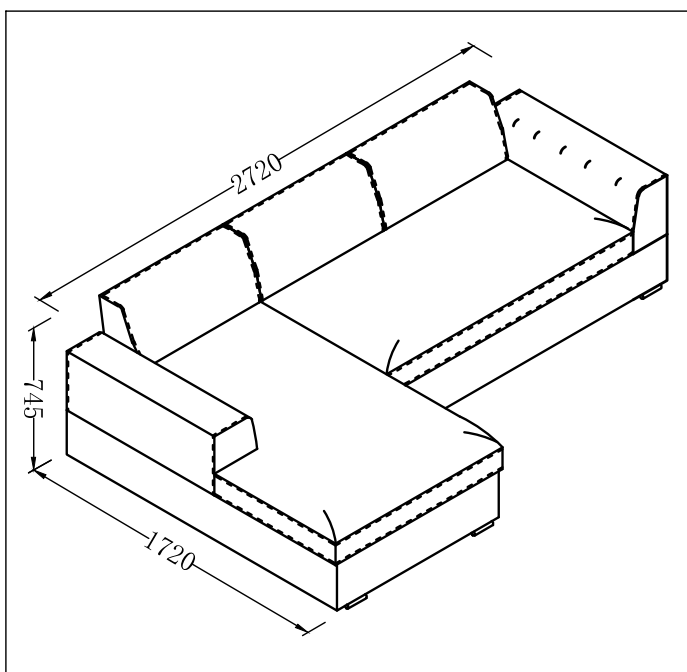

TOOLS NEEDED






M6

HARDWARE






A × 16
M6 × 30

COMPONENTS

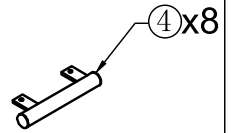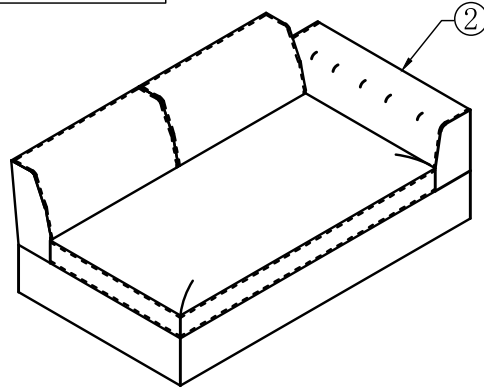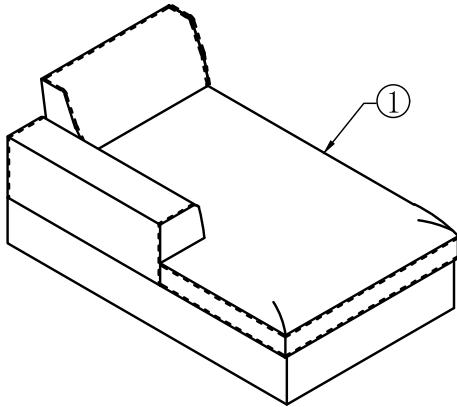

④x8

Assembly Instructions

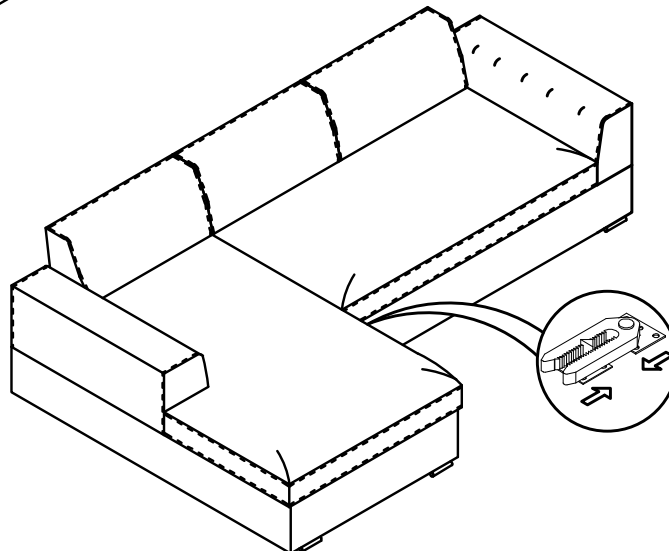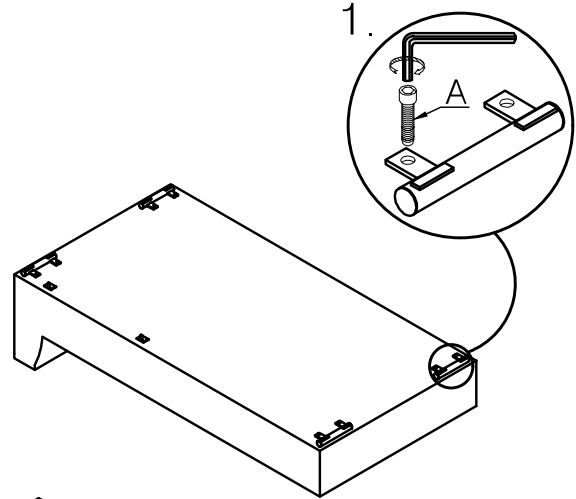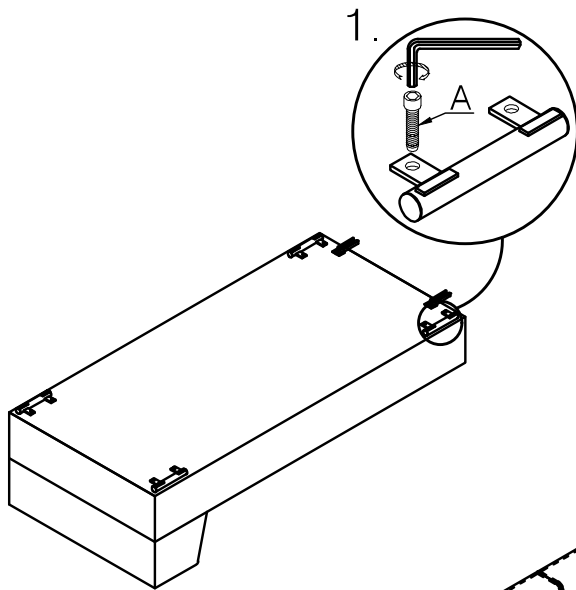


dwell

AI-SN-S872B




Verona right hand corner sofa bed with chaise storage mocha

143806-Mocha
143808-Charcoal

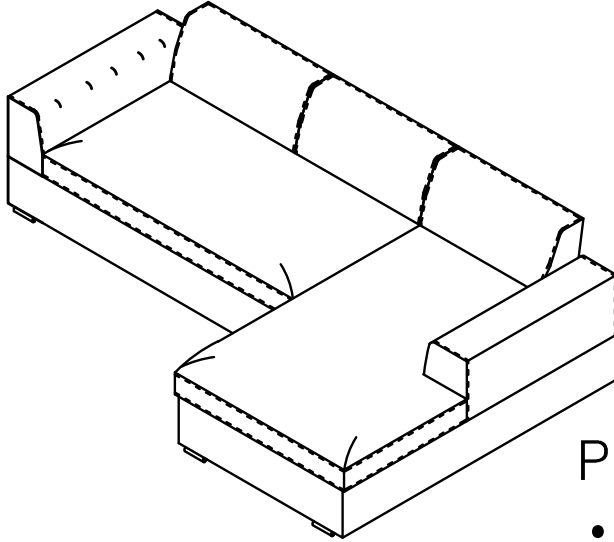


PLEASE READ

- Please read the assembly instructions carefully.
- We cannot accept return on any part or fully assembled products.
- Identify each part of the furniture before assembly using the instructions.
- Check all pieces are present and correct.
- Ensure you have all of the correct tools needed for assembly.
- Clear a suitable place to work.
- Never force the fittings together.
- Do not fully tighten any screws until all pieces of the main structure are in place.
- Keep these instructions for future assembly.

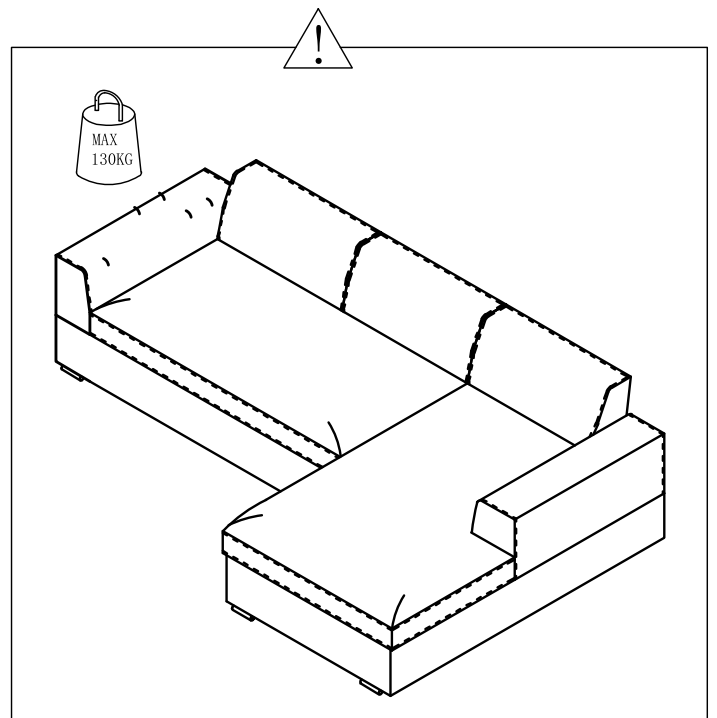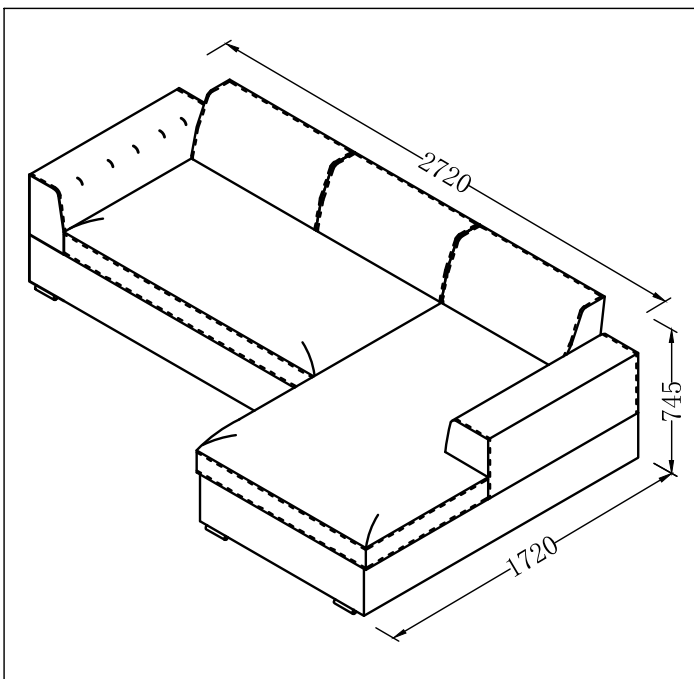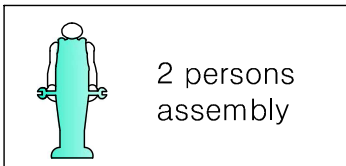


TOOLS NEEDED

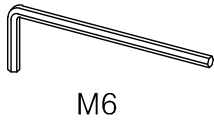

HARDWARE



COMPONENTS

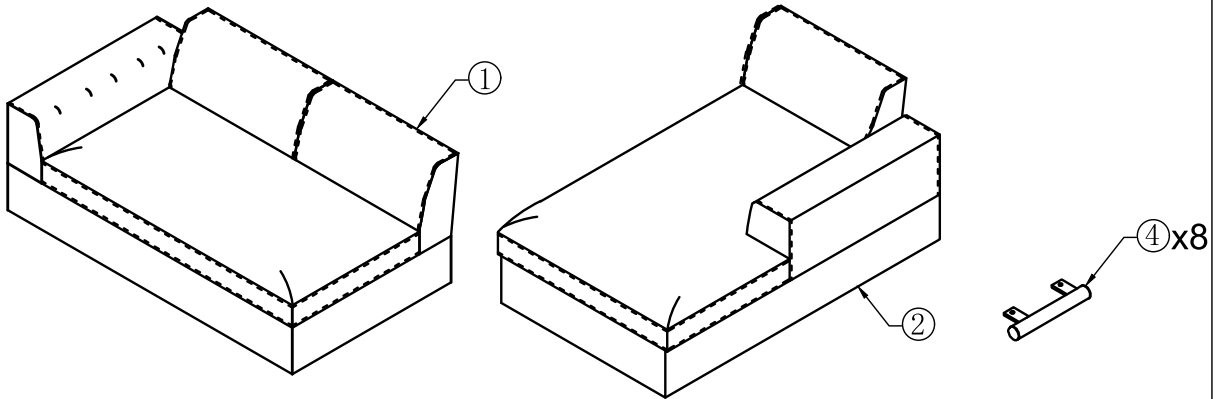

Assembly Instructions

