

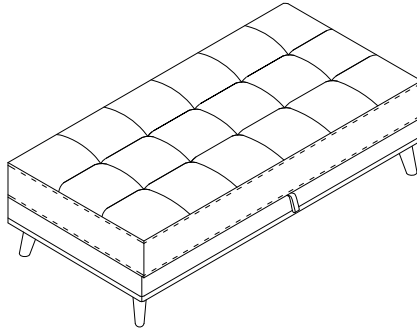
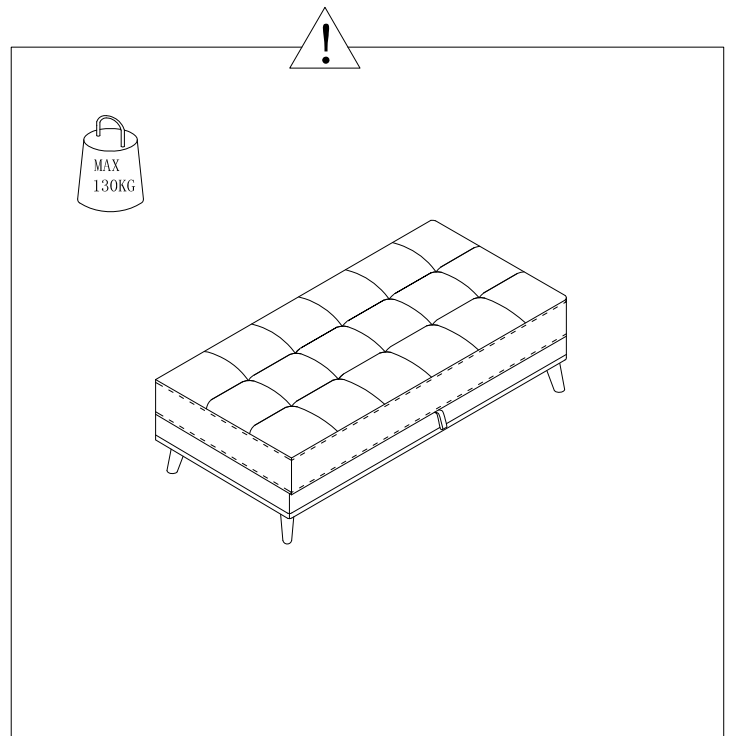


- 144018–Dark Grey Fabric
- 144020–Light Grey Leather
- 145058–Stone Leather
- 145060–Tan Leather

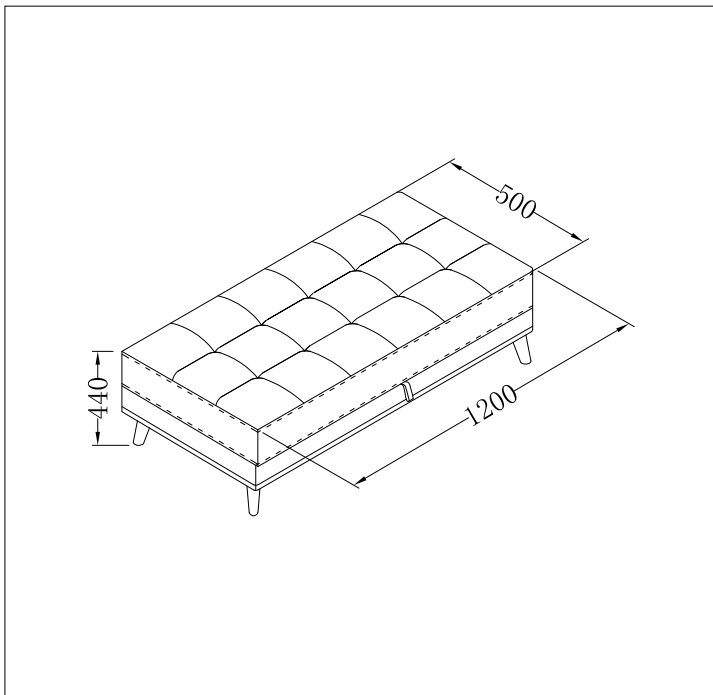

## PLEASE READ

- Please read the assembly instructions carefully.
- We cannot accept return on any part or fully assembled products.
- Identify each part of the furniture before assembly using the instructions.
- Check all pieces are present and correct.
- Ensure you have all of the correct tools needed for assembly.
- Clear a suitable place to work.
- Never force the fittings together.
- Do not fully tighten any screws until all pieces of the main structure are in place.
- Keep these instructions for future assembly.

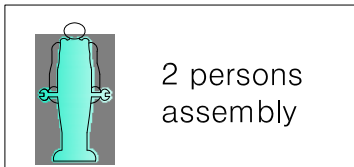

TOOLS NEEDED



M6

HARDWARE





A x16





B x16

COMPONENTS

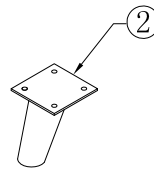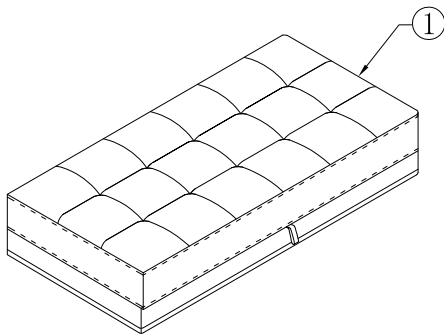

Assembly Instructions

Step 1.

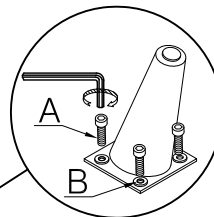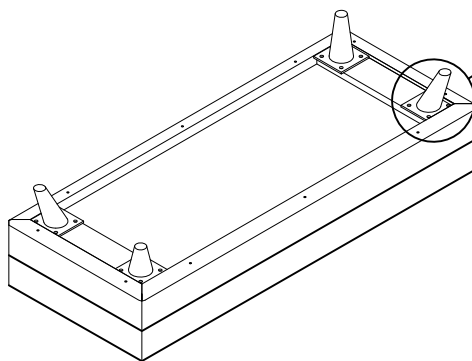

M6



A x16



B x16